

---

# BendPak Technical Service Bulletin

## RCD-1500EX Installing the Roller Guards

### Ranger TSB 89 – 032022

The purpose of this Technical Service Bulletin is to detail the addition of a plastic Roller Guard to the RCD-1500EX GoCart™ Rolling Car Dollies also referred to as Vehicle Positioning Jacks. This procedure is not reflected in the current RCD-1500EX Manual.

### Installing the Roller Guards

Clear a space to work on a bench or table.


The only tool required is a 19 mm open or closed end wrench to remove, then install, the Casters.

#### To install the Roller Guards:

1. Locate the Two outside Casters furthest away from Foot Pedal. Using the 19 mm wrench, remove the Nyloc Nuts and Washers securing the Casters onto the Positioning Jack Frame. Remove the Casters from the Frame and place the Washers and thread the Nyloc Nuts back onto the Casters temporarily. Set these parts aside where they will not become lost. Refer to the images below.



2. Examine the outside diameter of the Roller Guard. It consists of a plastic ring with a step reducing down to a smaller outside diameter. Slide the Guard's small diameter side over the Frame and *carefully* snap the Guard into the Aluminum Roller. Lift the Aluminum Roller up and away from the Jack Frame and slowly apply pressure to the Roller Guard until it snaps in. Refer to the image on the next page.

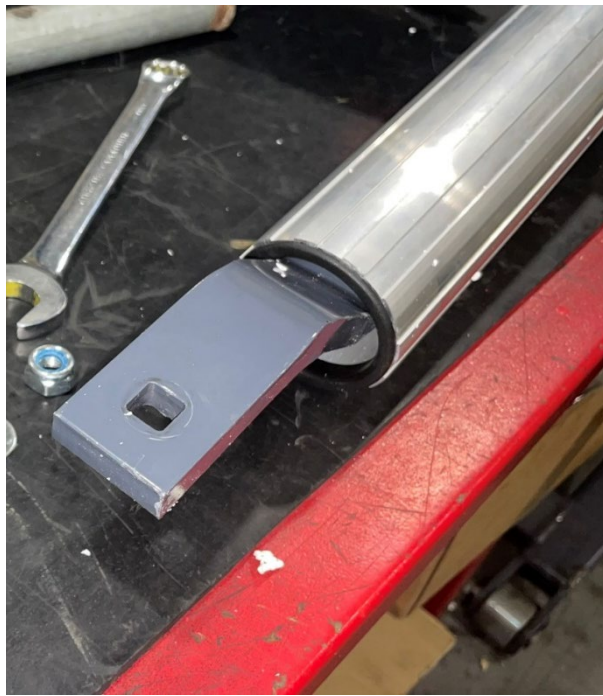

3. Replace the Casters in the Frame and secure with the Washers and Nyloc Nuts.



4. Verify the casters are secure and the Aluminum Rollers rotate freely without binding.

If you have issues with your RCD-1500EX GoCart™ Rolling Car Dollies, go to [bendpak.com/support](https://www.bendpak.com/support), email [support@bendpak.com](mailto:support@bendpak.com), or call (800) 253-2363.