



## Z-X0052 RC4WD 1/10 BendPak **XPR-9S Two-Post Lift**


Step 1. Install Control Box

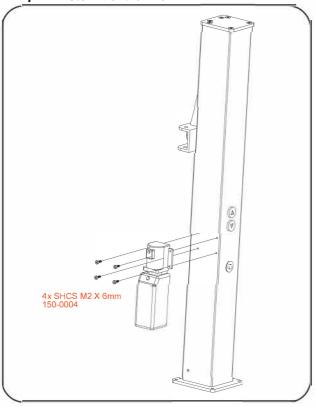


Step 2. Install Lift Arms Right Side

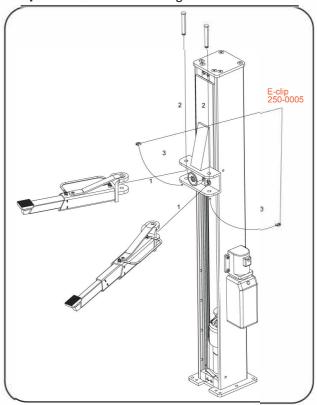

Step 3. Install Lift Arms Left Side

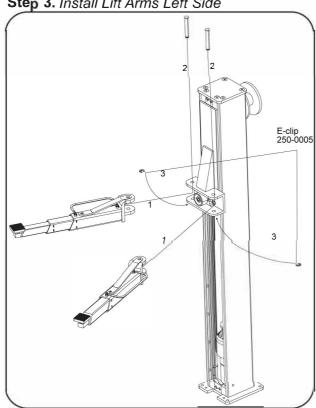


Step 4. Install Lift Towers

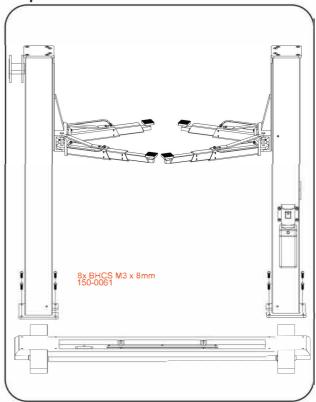




## Z-X0052 RC4WD 1/10 BendPak XPR-9S Two-Post Lift


Step 5. Connect Electronics

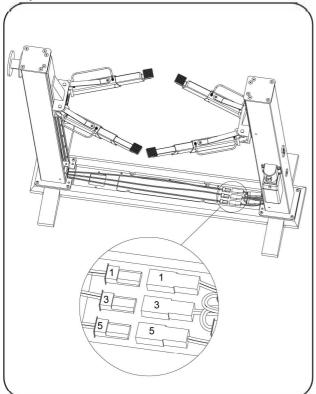


Step 6. Install Battery and Battery Cover

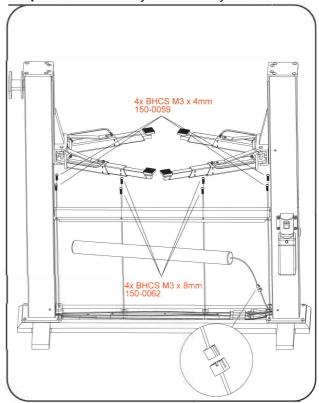

Step 7. Install Lower Battery Cover

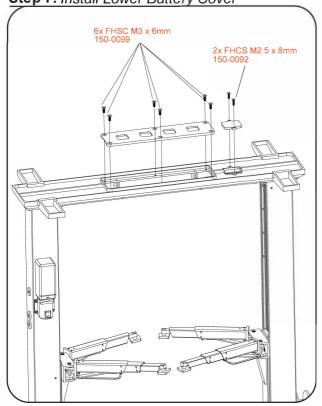

Step 8. Assembly Complete

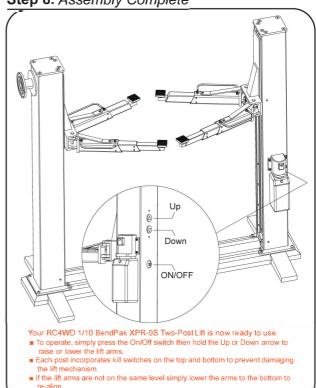

Be sure to turn the lift off when not in use to prevent damaging the batteries