

Service Manual

SERVICE PARTS & DIAGRAMS

BENDPAK GP-7LC

PRODUCT SKU
5175996

DRAWING Nº
5260661

CATEGORY
Two Post Lift

REV
Version C

DATE
03.11.2022



BendPak.

This guide is a troubleshooting reference used for maintaining and servicing your Bend Pak product. It provides comprehensive information on identifying serviceable parts and components and assists in troubleshooting problems and performing assembly /disassembly procedures.

BendPak, Inc. Corporate Office
1645 Lemonwood Drive
Santa Paula, CA 93060 USA
Toll Free US/Canada: 1-800-253-2363
Fax: 1-805-933-9160
info@bendpak.com



Customer Service Desk / Warranty
Customer Service Representatives
Office Tel: 1-805-933-9970
Toll Free US/Canada: 1-800-253-2363
Fax: 1-805-933-9160
customerservice@bendpak.com

Parts Orders
Customer Service Representatives
Office Tel: 1-805-933-9970
Toll Free US/Canada: 1-800-253-2363
Fax: 1-805-933-9160
parts@bendpak.com

Domestic Sales & Service
USA Sales Representatives
Office Tel: 1-805-933-9970
Toll Free US/Canada: 1-800-253-2363
Fax: 1-805-933-9160
sales@bendpak.com

International Sales & Service
Office Tel: 1-805-933-9970
Exports Dept: 1-805-933-9970 EXT. 192
Ext. Toll Free US/Canada: 1-800-253-2363
Fax: 1-805-933-9160
bpkexports@bendpak.com

REVISION				
REV	DESCRIPTION	DATE	EDITED BY	ECO#
A	PRODUCTION RELEASE, DERIVED FROM 5261005	09/13/2021	TM	01307
B	UPDATED BOM REVISION	01/11/2022	CA	01371
C	UPDATED BOM REVISION	03/02/2022	CA	01396

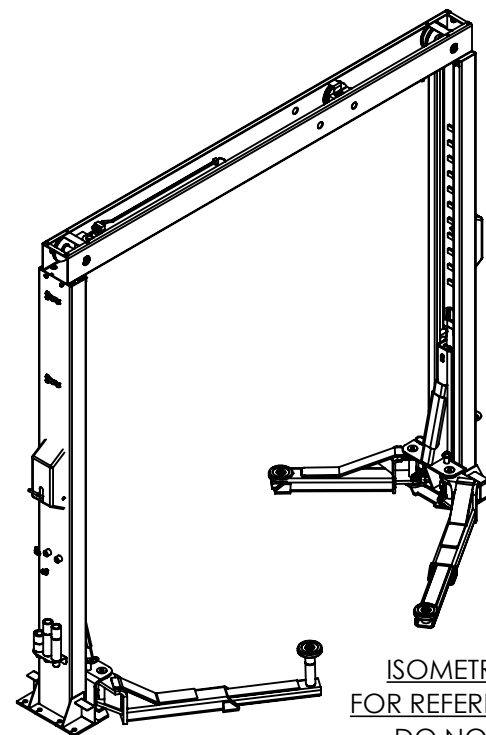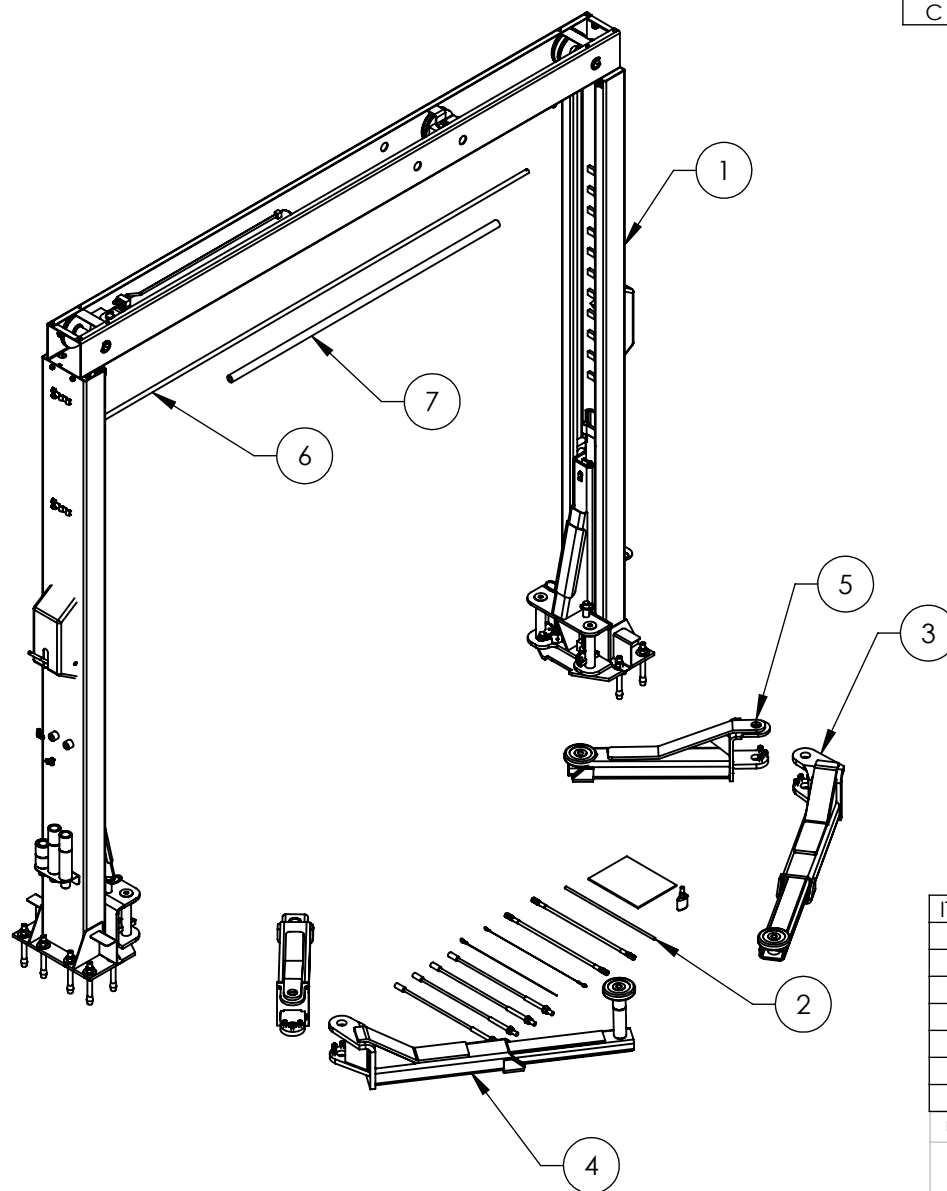

ITEM NO	PART NUMBER	DESCRIPTION	QTY	REV
1	5245168	GP-7LC LIFT SUPERSTRUCTURE	1	B
2	5250373	GP-7LC PARTS BOX	1	T
3	5215557	GP-7 90° MEDIUM ARM ASSEMBLY R.H.	1	V
4	5215554	GP-7 90° MEDIUM ARM ASSEMBLY L.H.	1	V
5	5215555	GP-7 LONG ARM ASSEMBLY	2	U
6	5765129	GP-7 TRIP STOP TUBE	1	A
7	5300242	GP-7 TRIP STOP BAR CUSHION	1	B

DO NOT SCALE DRAWING

DIMENSIONS ARE IN MM



NAME	DATE
DRAWN TM	09/13/2021
CHECKED OR	03/07/2022

THIRD ANGLE PROJECTION



PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS
THE SOLE PROPERTY OF BENDPAK INC. ANY
REPRODUCTION IN PART OR AS A WHOLE WITHOUT
THE WRITTEN PERMISSION OF BENDPAK INC. IS
PROHIBITED.

BendPak
1645 LEMONWOOD DR.
SANTA PAULA, CA 93060

TITLE: GP-7LC PRODUCTION
LIFT VER B


SIZE	DWG. NO.	REV
A	5260661	C

SCALE: 1:30

SHEET 1 OF 3


NOTE: UNLESS OTHERWISE SPECIFIED.

1. REFER TO MODEL FOR ADDITIONAL INFORMATION
2. SEE COLORS & GRAPHICS FOR LABEL PLACEMENT
3. SEE SHIPPING INSTRUCTIONS FOR FINAL PACKAGING

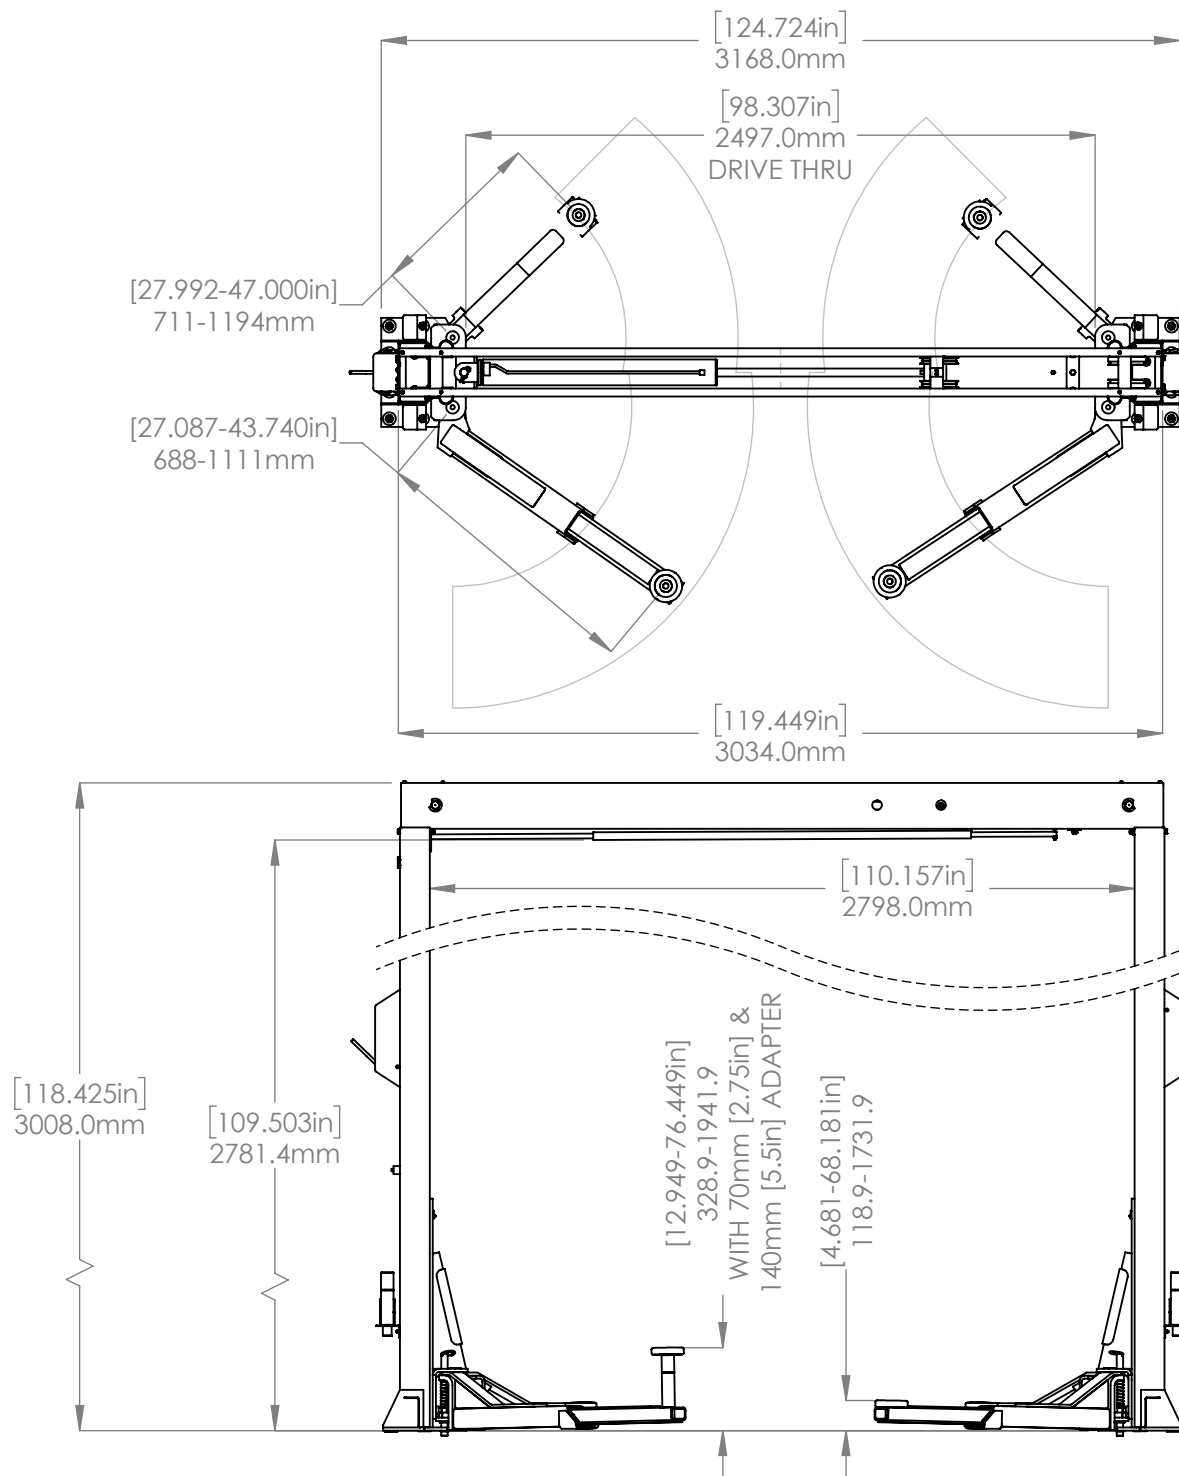


BP BendPak. 1645 LEMONWOOD DR. SANTA PAULA, CA 93060		
TITLE: GP-7LC PRODUCTION LIFT VER B		
SIZE	DWG. NO.	REV
A	5260661	C
SCALE: 1:30		SHEET 2 OF 3

REVISION				
REV	DESCRIPTION	DATE	EDITED BY	ECO#
A	PRODUCTION RELEASE, DERIVED FROM 52454520	09/13/2021	TM	01307
B	UPDATED BOM REVISION	03/02/2022	CA	01396

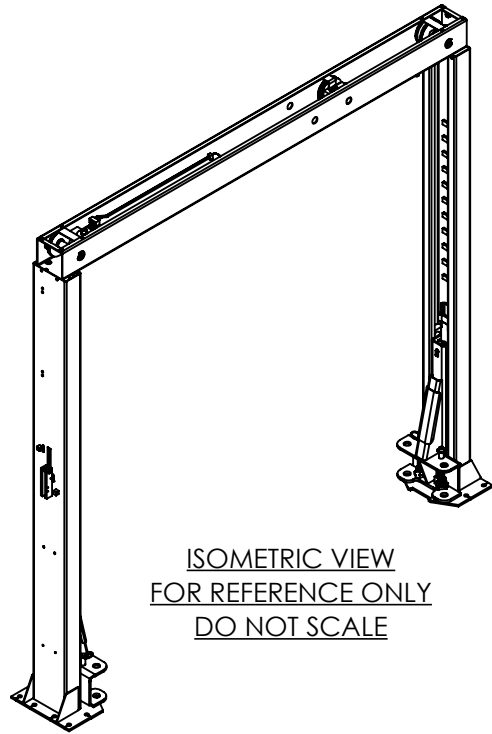

ISOMETRIC VIEW
FOR REFERENCE ONLY
DO NOT SCALE

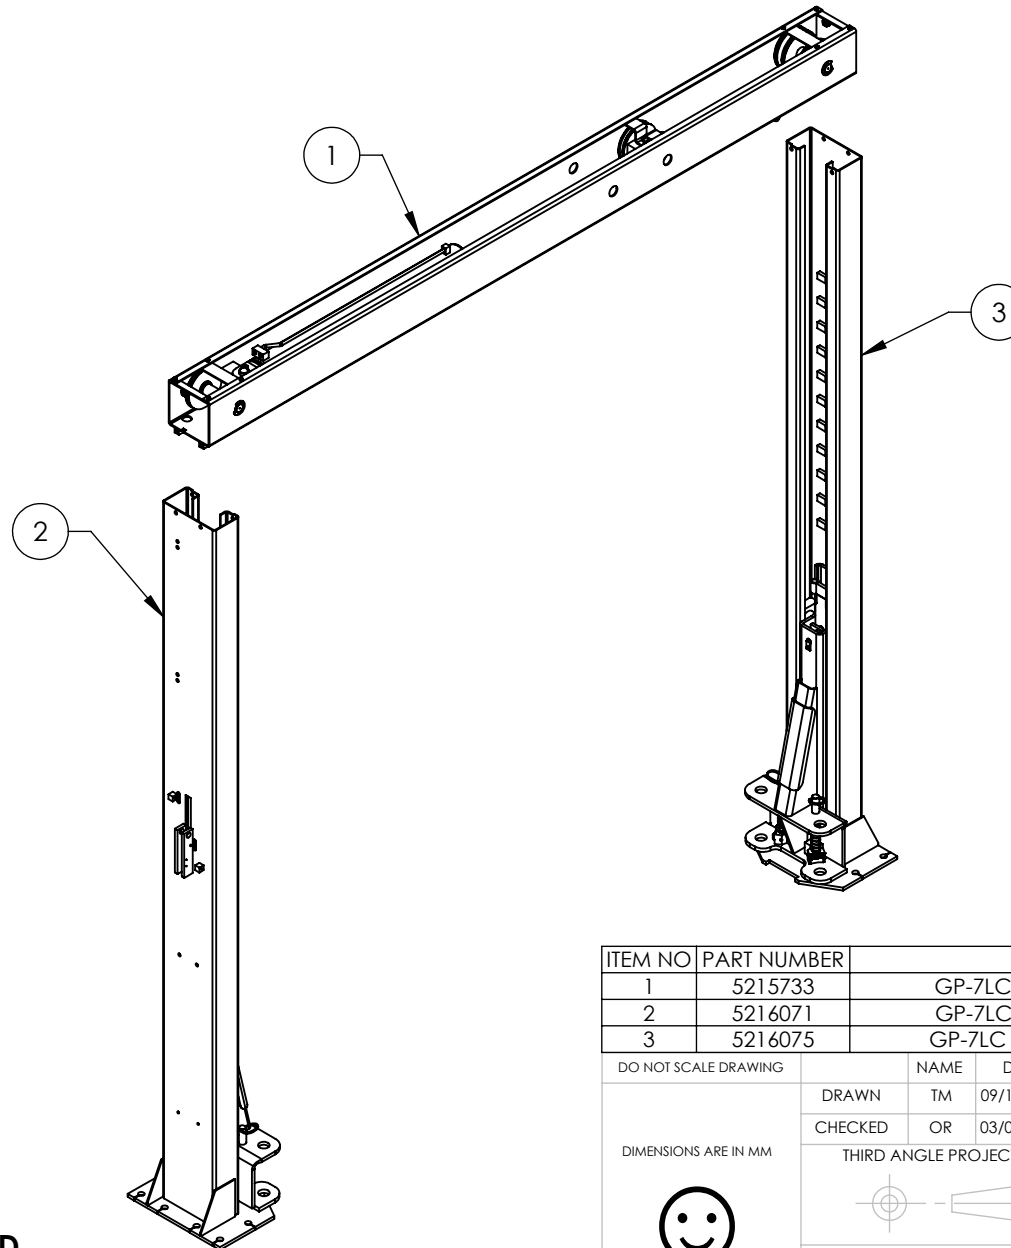

ITEM NO	PART NUMBER	DESCRIPTION	QTY	REV
1	5215733	GP-7LC TOP TROUGH ASSEMBLY	1	K
2	5216071	GP-7LC POWER POST ASSEMBLY	1	A
3	5216075	GP-7LC OFF SIDE POST ASSEMBLY	1	A

DO NOT SCALE DRAWING

NAME	DATE
DRAWN TM	09/13/2021
CHECKED OR	03/07/2022

BP BendPak
1645 LEMONWOOD DR.
SANTA PAULA, CA 93060

DIMENSIONS ARE IN MM

THIRD ANGLE PROJECTION



PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS
THE SOLE PROPERTY OF BENDPAK INC. ANY
REPRODUCTION IN PART OR AS A WHOLE WITHOUT
THE WRITTEN PERMISSION OF BENDPAK INC. IS
PROHIBITED.

TITLE: GP-7LC LIFT
SUPERSTRUCTURE

SIZE	DWG. NO.	REV
A	5245168	B

SCALE: 1:25

SHEET 1 OF 1


WHERE USED
GP-7LC

NOTE: UNLESS OTHERWISE SPECIFIED.


1. REFER TO MODEL FOR ADDITIONAL INFORMATION
2. SEE SHIPPING INSTRUCTIONS FOR FINAL PACKAGING

NEXT ASSEMBLY
5260661

REVISION				
REV	DESCRIPTION	DATE	EDITED BY	ECO#
A	PRODUCTION RELEASE, DERIVED FROM 5215728	09/13/2021	TM	01307

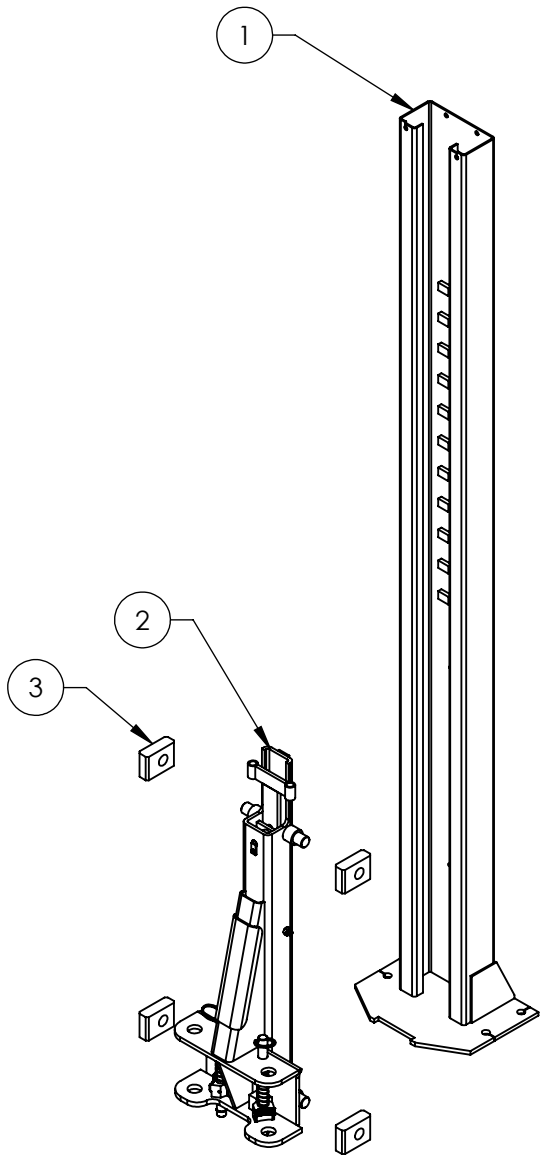

ISOMETRIC VIEW
FOR REFERENCE ONLY
DO NOT SCALE

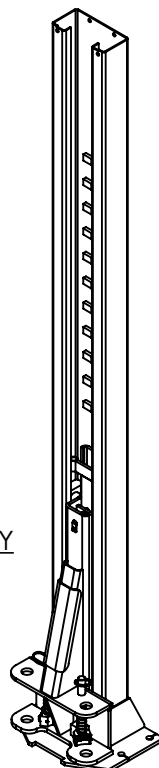

ITEM NO	PART NUMBER	DESCRIPTION	QTY	REV
1	5601175	GP-7LC POST WELDMENT	1	D
2	5216072	GP-7LC POWER SIDE LIFT HEAD ASSEMBLY	1	A
3	5716172	GP-7 SLIDE BLOCK	4	B

DO NOT SCALE DRAWING

NAME DATE

DRAWN TM 09/13/2021

CHECKED OR 09/16/2021

DIMENSIONS ARE IN MM

THIRD ANGLE PROJECTION



PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS
THE SOLE PROPERTY OF BENDPAK INC. ANY
REPRODUCTION IN PART OR AS A WHOLE WITHOUT
THE WRITTEN PERMISSION OF BENDPAK INC. IS
PROHIBITED.



1645 LEMONWOOD DR.
SANTA PAULA, CA 93060

TITLE: GP-7LC POWER
POST ASSEMBLY

SIZE DWG. NO.

A 5216071

REV

A

SCALE: 1:20

SHEET 1 OF 2

WHERE USED

GP-7LC


NOTE: UNLESS OTHERWISE SPECIFIED.

- SEE SHIPPING INSTRUCTIONS FOR FINAL PACKAGING
- ASSEMBLE ITEMS AS SHOWN


NEXT ASSEMBLY

5245168

REVISION				
REV	DESCRIPTION	DATE	EDITED BY	ECO#
A	PRODUCTION RELEASE, DERIVED FROM 5215739	09/13/2021	TM	01307

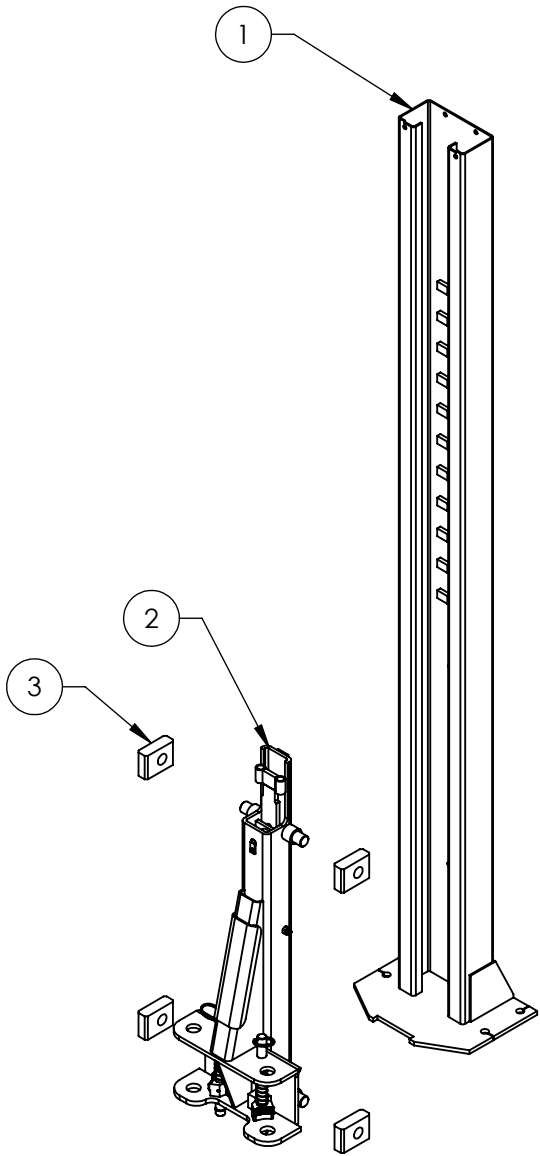

ISOMETRIC VIEW
FOR REFERENCE ONLY
DO NOT SCALE

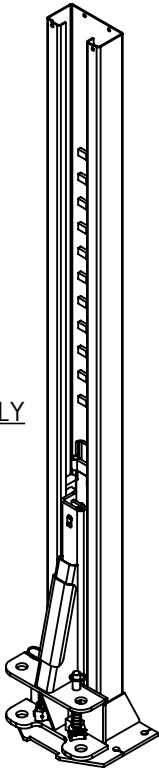

ITEM NO	PART NUMBER	DESCRIPTION	QTY	REV
1	5601175	GP-7LC POST WELDMENT	1	D
2	5216074	GP-7LC OFF SIDE LIFT HEAD ASSEMBLY	1	A
3	5716172	GP-7 SLIDE BLOCK	4	B

DO NOT SCALE DRAWING

NAME DATE

DRAWN TM 09/13/2021

CHECKED OR 09/16/2021

DIMENSIONS ARE IN MM

THIRD ANGLE PROJECTION



PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS
THE SOLE PROPERTY OF BENDPAK INC. ANY
REPRODUCTION IN PART OR AS A WHOLE WITHOUT
THE WRITTEN PERMISSION OF BENDPAK INC. IS
PROHIBITED.



TITLE: GP-7LC OFF SIDE POST
ASSEMBLY

SIZE DWG. NO. REV
A 5216075 A


SCALE: 1:20 SHEET 1 OF 2

WHERE USED
GP-7LC

NOTE: UNLESS OTHERWISE SPECIFIED.
1. REFER TO MODEL FOR ADDITIONAL INFORMATION
2. ASSEMBLE ITEMS AS SHOWN

NEXT ASSEMBLY
5245168

REVISION				
REV	DESCRIPTION	DATE	EDITED BY	ECO#
T	UPDATED BOM REVISION	05/30/2018	TM	00953
U	UPDATED BOM REVISION	03/25/2019	TM	01065
V	UPDATED BOM REVISION	05/21/2019	TS	01086

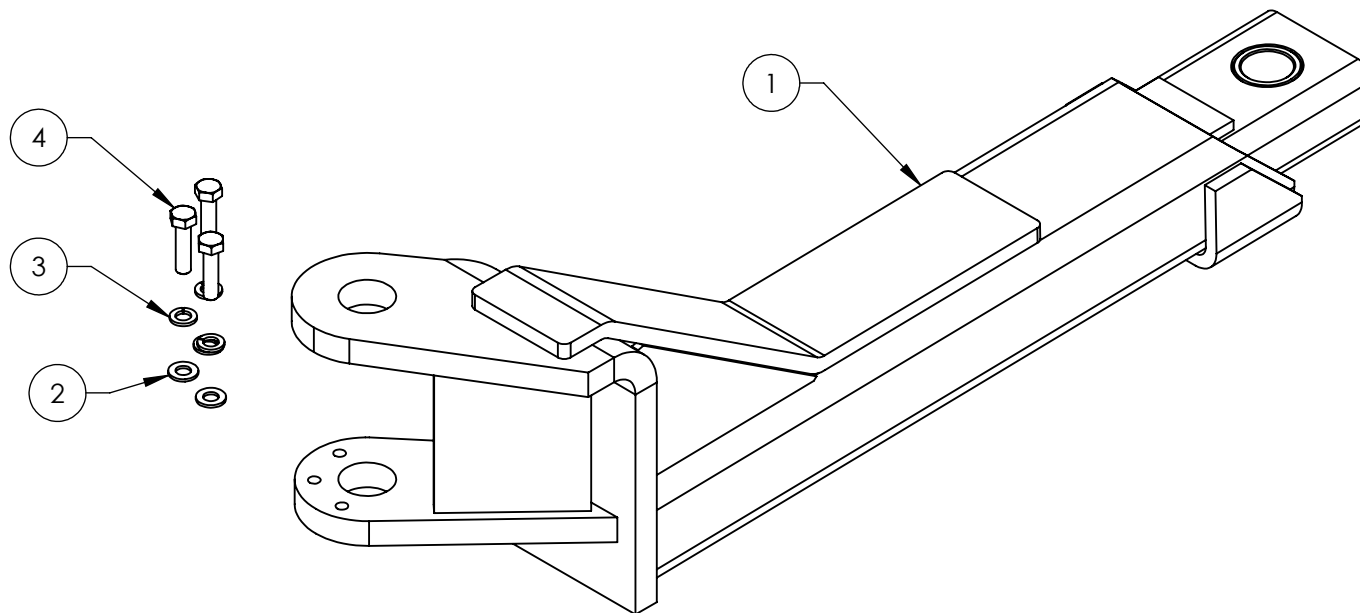

WHERE USED
GP-7 SERIES

NOTE: UNLESS OTHERWISE SPECIFIED.

1. REFER TO MODEL FOR ADDITIONAL INFORMATION
2. SEE SHIPPING INSTRUCTIONS FOR FINAL PACKAGING
3. ASSEMBLE ITEMS AS SHOWN

NEXT ASSEMBLY
5260660
5260661
5260662

ITEM NO	PART NUMBER	DESCRIPTION	QTY	REV
1	5600687	GP-7 90° MEDIUM ARM WELDMENT L.H.	1	U
2	5545341	WASHER M10 x Ø20 FLAT	3	-
3	5545200	WASHER M10 x Ø18 SL	3	-
4	5530302	HHB M10 x 1.5 x 40 FULLY THREAD	3	-

DO NOT SCALE DRAWING

DIMENSIONS ARE IN MM



NAME	DATE
DRAWN TM	06/12/2012
CHECKED CA	6/17/2019

THIRD ANGLE PROJECTION



PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS
THE SOLE PROPERTY OF BENDPAK INC. ANY
REPRODUCTION IN PART OR AS A WHOLE WITHOUT
THE WRITTEN PERMISSION OF BENDPAK INC. IS
PROHIBITED.




TITLE: GP-7 90° MEDIUM ARM ASSEMBLY L.H.

SIZE	DWG. NO.	REV
A	5215554	V

SCALE: 1:5

SHEET 1 OF 1

REVISION				
REV	DESCRIPTION	DATE	EDITED BY	ECO#
R	UPDATED BOM REVISION	05/01/2018	CA	00943
T	UPDATED BOM REVISION	05/30/2018	TM	00953
U	UPDATED BOM REVISION	05/21/2019	TS	01086

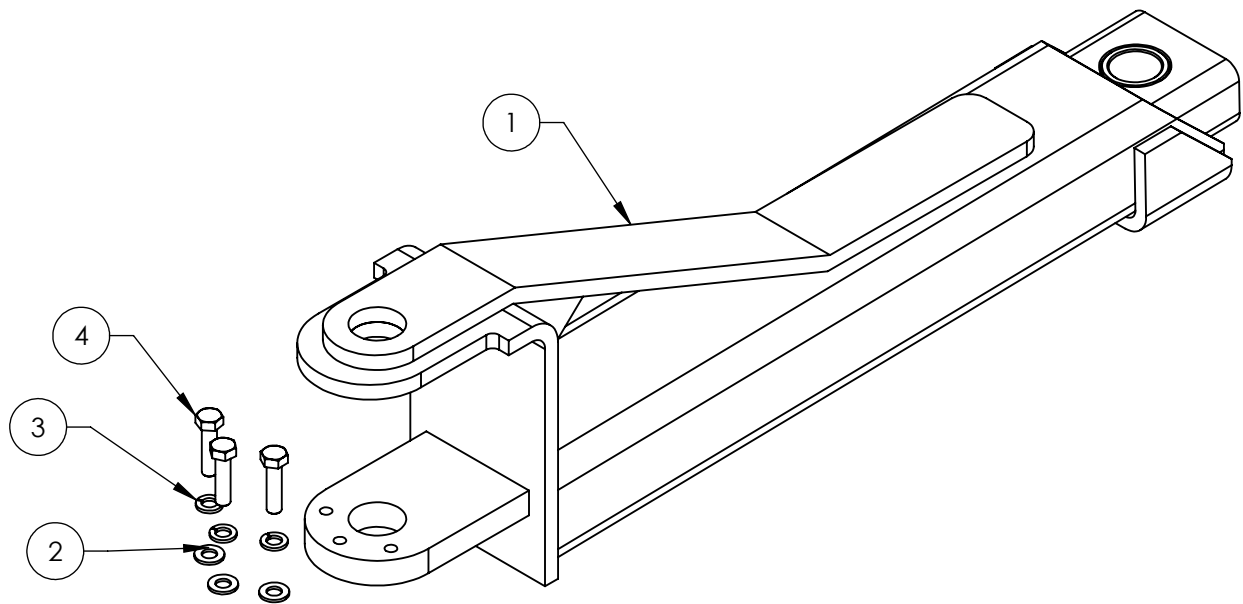

ITEM NO	PART NUMBER	DESCRIPTION	QTY	REV
1	5600688	GP-7 LONG ARM WELDMENT	1	U
2	5545341	WASHER M10 x Ø20 FLAT	3	-
3	5545200	WASHER M10 x Ø18 SL	3	-
4	5530302	HHB M10 x 1.5 x 40 FULLY THREAD	3	-

DO NOT SCALE DRAWING

NAME DATE

DRAWN TM 06/14/2012

CHECKED CA 6/17/2019

DIMENSIONS ARE IN MM

THIRD ANGLE PROJECTION



PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS
THE SOLE PROPERTY OF BENDPAK INC. ANY
REPRODUCTION IN PART OR AS A WHOLE WITHOUT
THE WRITTEN PERMISSION OF BENDPAK INC. IS
PROHIBITED.

BendPak
1645 LEMONWOOD DR.
SANTA PAULA, CA 93060

TITLE: GP-7 LONG ARM
ASSEMBLY

SIZE DWG. NO.

A 5215555

REV

U

SCALE: 1:5

SHEET 1 OF 1

WHERE USED

GP-7 SERIES

NOTE: UNLESS OTHERWISE SPECIFIED.

1. REFER TO MODEL FOR ADDITIONAL INFORMATION
2. SEE SHIPPING INSTRUCTIONS FOR FINAL PACKAGING
3. ASSEMBLE ITEMS AS SHOWN


NEXT ASSEMBLY

5260660

5260661

5260662

REVISION				
REV	DESCRIPTION	DATE	EDITED BY	ECO#
T	UPDATED BOM REVISION	05/30/2018	TM	00953
U	UPDATED BOM REVISION	03/25/2019	TM	01065
V	UPDATED BOM REVISION	05/21/2019	TS	01086

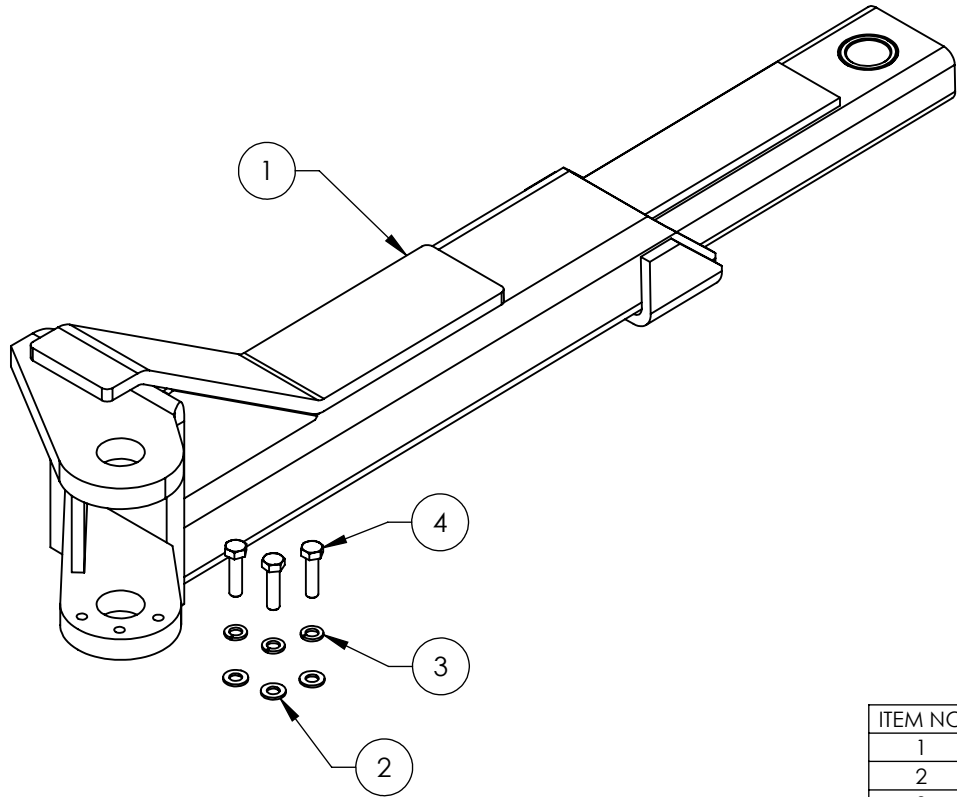

WHERE USED
GP-7 SERIES


- NOTE: UNLESS OTHERWISE SPECIFIED.**
- REFER TO MODEL FOR ADDITIONAL INFORMATION
 - SEE SHIPPING INSTRUCTIONS FOR FINAL PACKAGING
 - ASSEMBLE ITEMS AS SHOWN

NEXT ASSEMBLY
5260660
5260661
5260662

ITEM NO	PART NUMBER	DESCRIPTION		QTY	REV
1	5600684	GP-7 90° MEDIUM ARM WELDMENT R.H.		1	T
2	5545341	WASHER M10 x Ø20 FLAT		3	-
3	5545200	WASHER M10 x Ø18 SL		3	-
4	5530302	HHB M10 x 1.5 x 40 FULLY THREAD		3	-

DO NOT SCALE DRAWING		NAME	DATE	 1645 LEMONWOOD DR. SANTA PAULA, CA 93060
 DIMENSIONS ARE IN MM	DRAWN	TM	06/12/2012	
	CHECKED	CA	6/17/2019	
	THIRD ANGLE PROJECTION		TITLE: GP-7 90° MEDIUM ARM ASSEMBLY R.H.	
		SIZE	DWG. NO.	REV
		A	5215557	V
PROPRIETARY AND CONFIDENTIAL THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF BENDPAK INC. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF BENDPAK INC. IS PROHIBITED.		SCALE: 1:6		SHEET 1 OF 1

REVISION				
REV	DESCRIPTION	DATE	EDITED BY	ECO#
Q	UPDATED BOM REVISION	10/02/2020	TM	01215
R	REPLACED 5570195 WITH 5570249, UPDATED BOM REVISION	02/18/2021	CA	01273
R-001	UPDATED LENGHT FOR 5520116, WAS 400mm NOW 610mm	09/16/2021	OR	01307
T	UPDATED BOM REVISIONS	01/11/2022	CA	01371

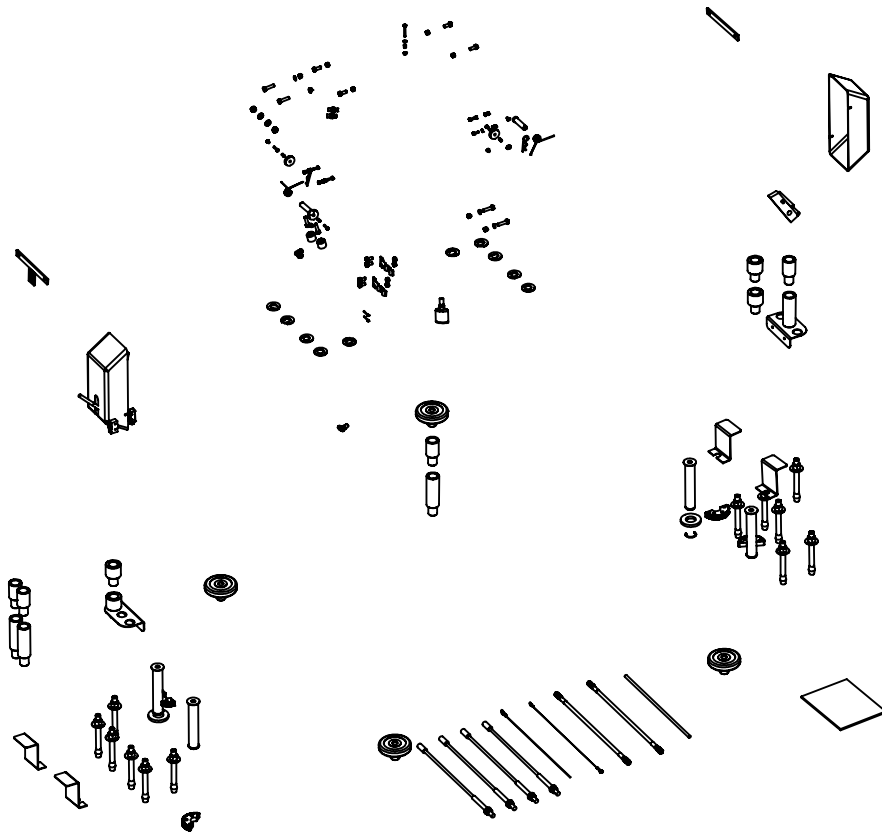

ITEM NO	PART NUMBER	DESCRIPTION	QTY	REV
1	5174660	GP-7 PARTS BAG	1	P
2	5736604	TWO POST LIGHT DUTY BOLT ON ARM RESTRAINT GEAR	4	E
3	5505040	GP-7 LIFT HEAD PIN WELDMENT	4	E
4	5540281	C RING Ø38mm OD 5103-150	4	-
5	5210245	GP-7 OFF SIDE SAFETY LATCH WELDMENT	1	D
6	5210240	GP-7 POWER SIDE SAFETY LATCH WELDMENT	1	H
7	5215507	ROUND LIFT PAD ADAPTER ASSEMBLY	4	G
8	5746389	SHORT LIFT PAD EXTENSION (95mm LG.)	4	C
9	5746390	MEDIUM LIFT PAD EXTENSION Ø35 x 113mm	4	E
10	5746395	LONG LIFT PAD EXTENSION Ø35 x 182mm	4	D
11	5730664	GP-7 POST ASSEMBLY LIFT HEAD FOOT GUARD L.H.	2	H
12	5730663	GP-7 POST ASSEMBLY LIFT HEAD FOOT GUARD R.H.	2	H
13	5525112	MICRO SWITCH COVER-5PA2	1	-
14	5525150	SPDT MICRO SWITCH;25A@125VAC	1	-
15	5595932	GP-7LC CABLE ASSEMBLY Ø10 x 6566mm ST	2	C
16	5595934	GP-7LC CABLE ASSEMBLY Ø10 x 3575mm ST	2	C
17	5595933	GP-7LC Ø2.4 x 6614mm SAFETY CABLE	1	A
18	5595550	GP-7LC Ø1.2 x 1320mm MICRO SWITCH CABLE	1	C
19	5570249	HYDRAULIC HOSE ASSEMBLY Ø6.35 x 2228mm DS	2	A
20	5520116	14-4 SJO UL 62 CABLE 300vac	610mm*	-
21	5530337	AB 3/4" x 6.3"	12	-
22	5716173	D2-8/12/15, GP/XPR POWER SIDE PLASTIC SAFETY COVER	1	B
23	5716174	D2-8/12/15, GP/XPR OFF SIDE PLASTIC SAFETY COVER	1	B
24	5746293	GP-7 ARM SPACER	2	E
25	5600718	GP-7 POST STRAP WELDMENT	1	A
26	5736493	GP-7 POST STRAP	1	A
27	5900209	GP-7 SERIES INSTALLATION MANUAL	1	-
28	5701665	D2-8F, GP-7 HEIGHT ADAPTER HOLDER	2	A

WHERE USED
GP-7LC

NOTE: UNLESS OTHERWISE SPECIFIED.

- SEE SHIPPING INSTRUCTIONS FOR FINAL PACKAGING
- *HOSES AND CABLES ARE IN REPRESENTATIONAL FORM
- FOR 5220116 SPECIFICATIONS REFER TO PART SPECIFICATION FORM (*) QTY FOR REFERENCE ONLY

NEXT ASSEMBLY
5260661

DO NOT SCALE DRAWING

DIMENSIONS ARE IN MM



NAME
DRAWN TS
CHECKED

DATE
05/22/2017

THIRD ANGLE PROJECTION


PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF BENDPAK INC. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF BENDPAK INC. IS PROHIBITED.

BendPak
1645 LEMONWOOD DR.
SANTA PAULA, CA 93060

TITLE:
GP-7LC PARTS BOX


SIZE DWG. NO. REV
A 5250373 T

SCALE: 1:30 SHEET 1 OF 2

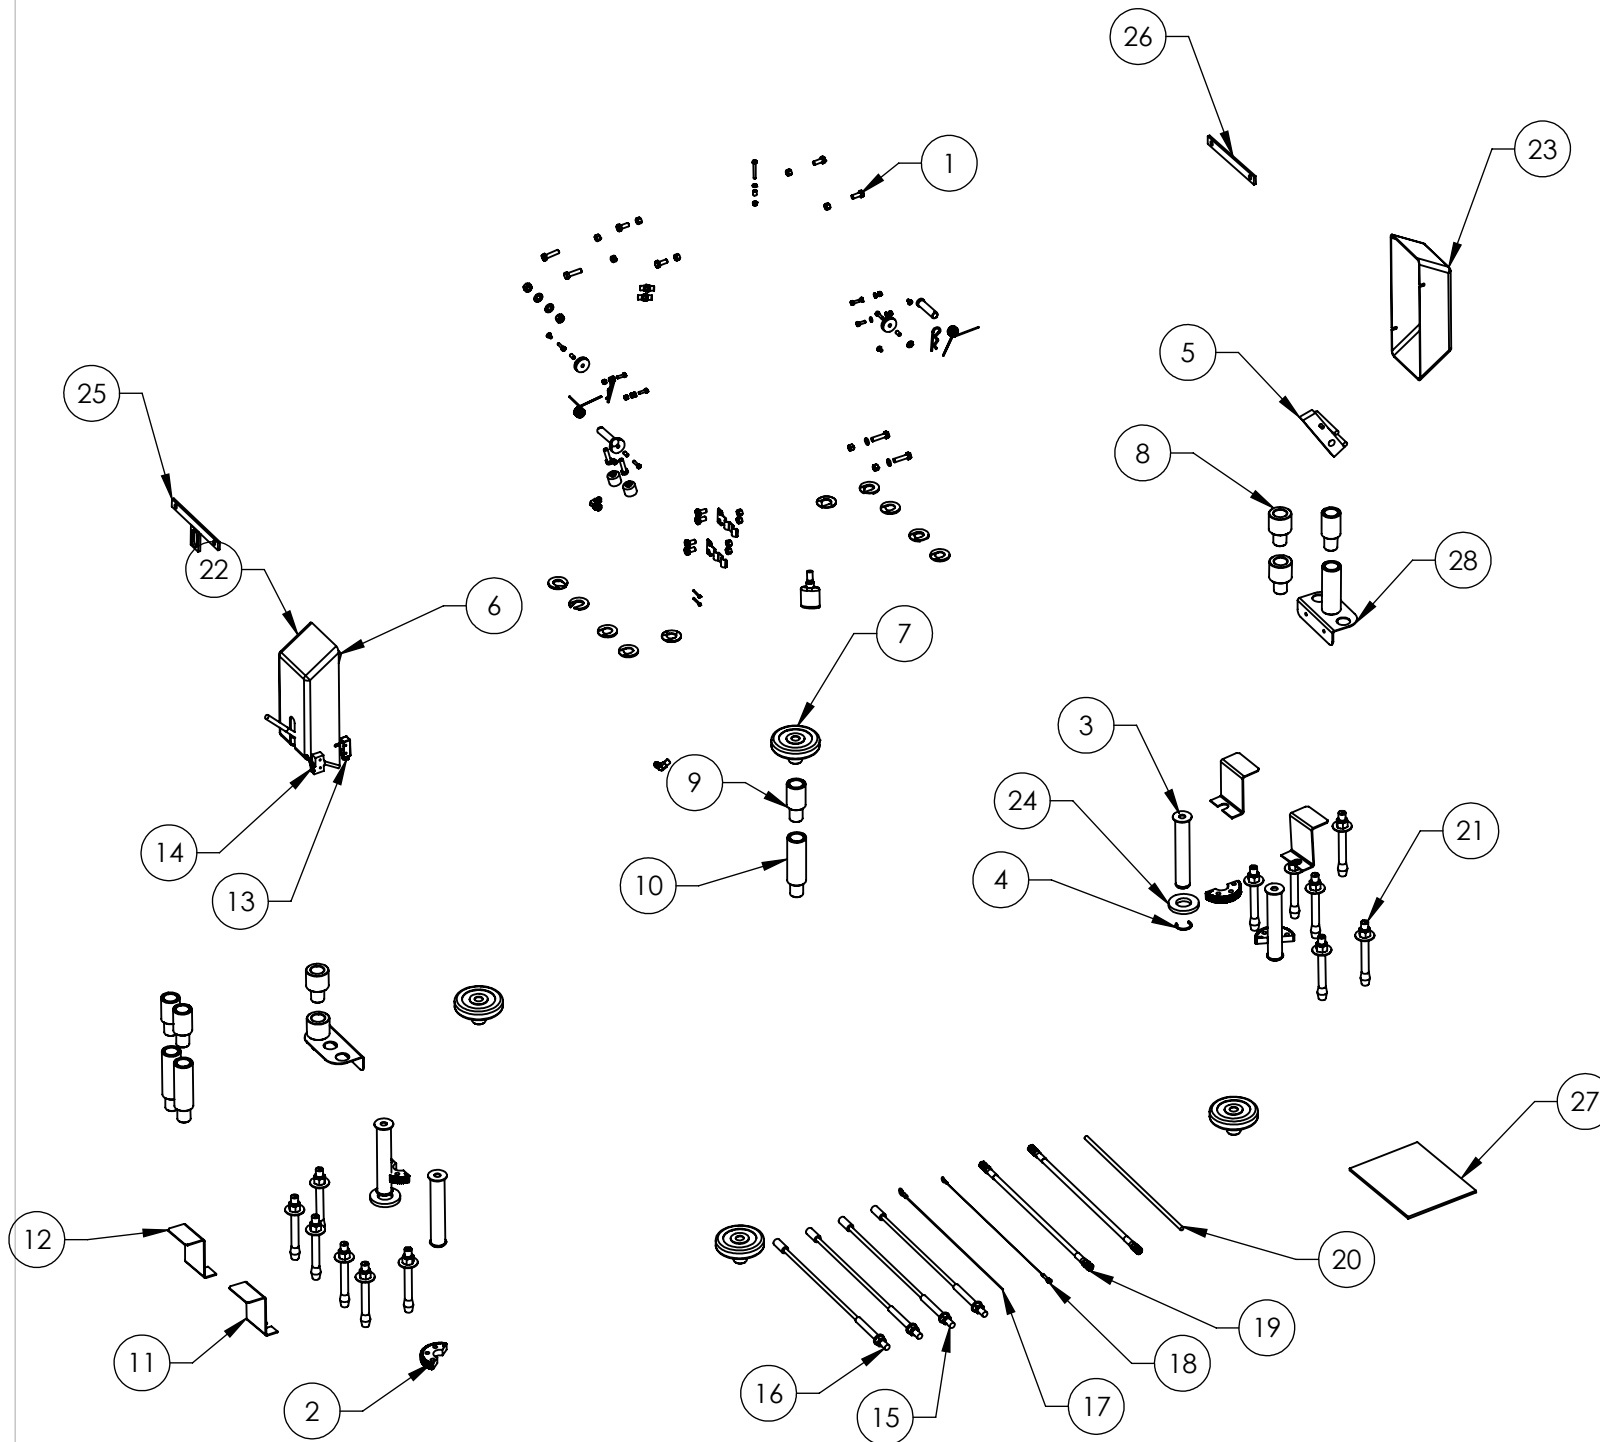

		
1645 LEMONWOOD DR. SANTA PAULA, CA 93060		
TITLE: GP-7LC PARTS BOX		
SIZE A	DWG. NO. 5250373	REV T
SCALE: 1:20		SHEET 2 OF 2

REVISION				
REV	DESCRIPTION	DATE	EDITED BY	ECO#
M	ADDED (2) 5545200, 5580012, 5530093, (4) 5535357, AND (4) 5545005, REPLACED 5550100 WITH 5550147	02/07/2020	TM	01107
N	REPLACED 5505001 WITH 5505113, REMOVED (2) 5540075	10/01/2020	TM	01215
P	REPLACED 5550183 WITH 5550103, 5550550 WITH 5550106, 5505051 WITH 5505077, AND (2) 5530738 WITH 5530267, ADDED (2) 5535013 AND (2) 5530267, REMOVED 5550061	02/26/2021	CA	01273

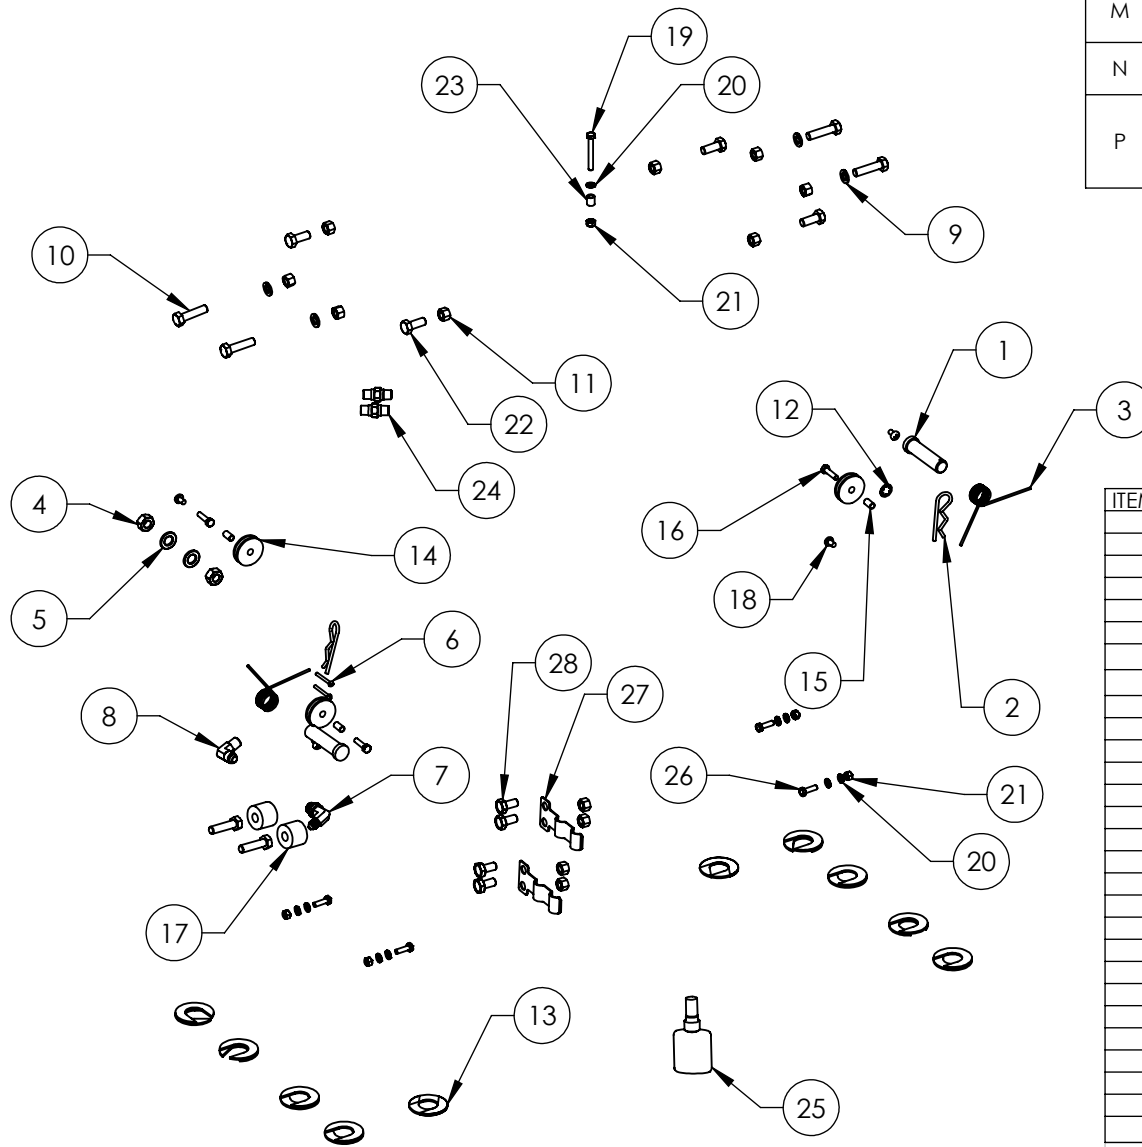

ITEM NO	PART NUMBER	DESCRIPTION	QTY	REV
1	5505113	2 POST SAFETY CLEVIS PIN	2	H
2	5505350	MODEL#211 HAIR PIN/ LARGE	2	-
3	5540075	R.H., 2.5 WIRE DIA., Ø20.5 x 75 LG	2	-
4	5535354	NUT M12 x 1.75	2	-
5	5545347	WASHER, M12 FLAT WASHER	2	-
6	5530115	BHS 6-32 x 1.25	2	-
7	5550103	FTG ELB -04 JIC -06 ORB	1	-
8	5550106	FTG ELB -04JIC x 3/8" NPT	1	-
9	5545200	WASHER M10 x Ø18 SL	6	-
10	5530302	HHB M10 x 1.5 x 40 FULLY THREAD	6	-
11	5535013	NUT M10 x 1.5 NL	12	-
12	5505031	ROTOR CLIP 12mm SS	1	-
13	5545535	C WASHER SHIM FOR LIFTS	20	-
14	5575107	Ø40mm SAFETY SHEAVE	3	A
15	5565125	GP-7 SAFETY SHEAVE SPACER, LONG	3	A
16	5530756	HHB M6 x 1 x 25	3	-
17	5575108	GP-7 SERIES POWER UNIT STANDOFF	2	A
18	5530261	PHPS M6 x 1 x 10	4	-
19	5530097	HHB M6 x 1.0 x 50	1	-
20	5545005	M6 FLAT WASHER	9	-
21	5535357	NUT M6 x 1.0 NL	5	-
22	5530738	HHB M10 x 1.5 x 25	4	-
23	5755136	D4-12, HD AIR CYLINDER SPACER 12mm	1	A
24	5550147	FTG NPL -04 JIC x -04 NPT	2	-
25	5580012	LIQUID PTFE THREAD SEALANT 50ml	1	-
26	5530093	HHB M6 x 1 x 20	4	-
27	5505077	DOUBLE PIPE STRAP, Ø10mm	2	A
28	5530267	HHB, M10 x 1.5 x 20	4	-


WHERE USED
GP-7
GP-7LC
GP-7LCS

NOTE: UNLESS OTHERWISE SPECIFIED.

1. SEE SHIPPING INSTRUCTIONS FOR FINAL PACKAGING

NEXT ASSEMBLY
5250080
5250373
5250374

DO NOT SCALE DRAWING		NAME	DATE	 1645 LEMONWOOD DR. SANTA PAULA, CA 93060
DIMENSIONS ARE IN MM		DRAWN	TM 06/19/2012	
		CHECKED	OR 02/22/2021	
		THIRD ANGLE PROJECTION		
		TITLE:		GP-7 PARTS BAG
		SIZE DWG. NO.		A 5174660
PROPRIETARY AND CONFIDENTIAL THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF BENDPAK INC. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF BENDPAK INC. IS PROHIBITED.		REV		P
		SCALE: 1:10		SHEET 1 OF 1

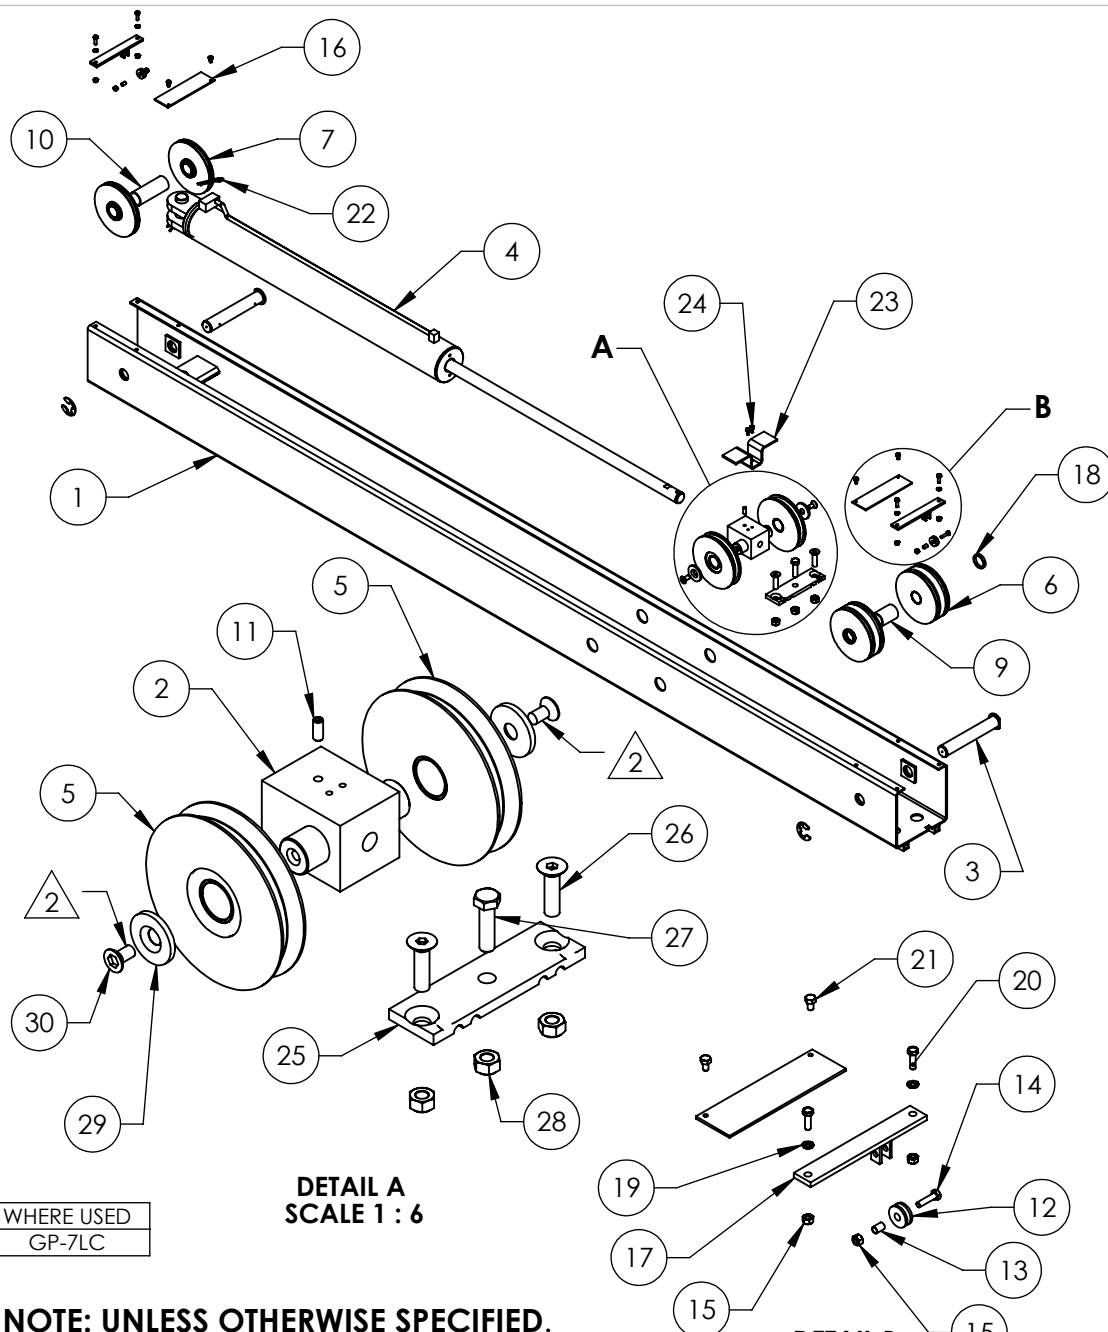

WHERE USED
GP-7LC

DETAIL A
SCALE 1 : 6

DETAIL B
SCALE 1 : 8

- NOTE: UNLESS OTHERWISE SPECIFIED.**
1. REFER TO MODEL FOR ADDITIONAL INFORMATION
 2. APPLY LOCTITE BLUE 242 TO THREADS AND CURE PER MANUFACTURE SPECIFICATION
 3. SEE SHIPPING INSTRUCTIONS FOR FINAL PACKAGING ASSEMBLE ITEMS AS SHOWN
 - 4.

NEXT ASSEMBLY
5245168

REVISION				
REV	DESCRIPTION	DATE	EDITED BY	ECO#
H	UPDATED BOM REVISION	12/24/2020	CA	01252
J	REPLACED 5502033 WITH 5502212	01/14/2021	TM	01261
K	UPDATED BOM REVISION	03/02/2022	CA	01396

ITEM NO	PART NUMBER	DESCRIPTION	QTY	REV
1	5601176	GP-7LC/LCS TOP TROUGH WELDMENT	1	A
2	5601282	GP-7 CYLINDER PULL BLOCK WELDMENT	1	A
3	5600690	GP-7 POST SHEAVE PIN WELDMENT	2	B
4	5502212	CYLINDER ASSEMBLY Ø3.5 x 31.75 PULL CYLINDER	1	C
5	5215802	GP-7 SERIES PULL BLOCK TWIN SHEAVE ASSEMBLY	2	A
6	5216015	GP-7 TWIN SHEAVE ASSEMBLY, 48mm WIDE	2	A
7	5215549	GP-7 SERIES SHEAVE ASSEMBLY	2	D
8	5540010	E RING Ø32mm OD DIN 6799	2	--
9	5746521	GP-7 TWIN SHEAVE SPACER, 57mm LONG	1	A
10	5746283	GP-7 SHEAVE SPACER	1	C
11	5530239	SSS M8 x 1.25 x 20	1	--
12	5575112	D2/GP/PCL/XPR/PL-7000 SAFETY SHEAVE	2	C
13	5565350	D2/GP/PCL/XPR/PL-7000 SAFETY SHEAVE SPACER	2	C
14	5530756	HHB M6 x 1.0 x 25mm	2	--
15	5535357	NUT M6 x 1.0 NL	6	--
16	5736519	GP-7 CABLE RETAINER PLATE	2	C
17	5600693	GP-7 SAFETY SHEAVE BRACKET PLATE WELDMENT	2	A
18	5746285	GP-7 TWIN SHEAVE SPACER, SHORT	2	B
19	5545005	WASHER, M6 x 12mm FLAT	4	--
20	5530093	HHB M6 x 1.0 x 20mm	4	--
21	5530181	HHB M6 x 1.0 x 10	4	--
22	5505350	HAIR PIN 1/8" x 2 9/16"	2	--
23	5701437	GP-7 PULL BLOCK SHEAVE RETAINER	1	C
24	5530031	HHB M6 x 1.0 x 12mm	2	--
25	5736533	GP-7 TOP TROUGH CABLE TIE PLATE, TOP	1	C
26	5530794	FHSS M12 x 1.75 x 45 CL 10.9	2	--
27	5530792	HHB M12 x 1.75 x 45 CL10.9	1	--
28	5535041	NUT M12 x 1.75 NL CL10.9	3	--
29	5746466	GP-7 SERIES INNER SCISSOR BEARING SPACER	2	A
30	5530346	FHSS M10 x 1.5 x 20 CL10.9	2	--

DO NOT SCALE DRAWING

NAME DATE
DRAWN TM 06/02/2017
CHECKED OR 03/07/2022

DIMENSIONS ARE IN MM



THIRD ANGLE PROJECTION




PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF BENDPAK INC. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF BENDPAK INC. IS PROHIBITED.

BendPak
1645 LEMONWOOD DR.
SANTA PAULA, CA 93060


TITLE: GP-7LC TOP TROUGH ASSEMBLY

SIZE DWG. NO. REV
A 5215733 K

SCALE: 1:20 SHEET 1 OF 1

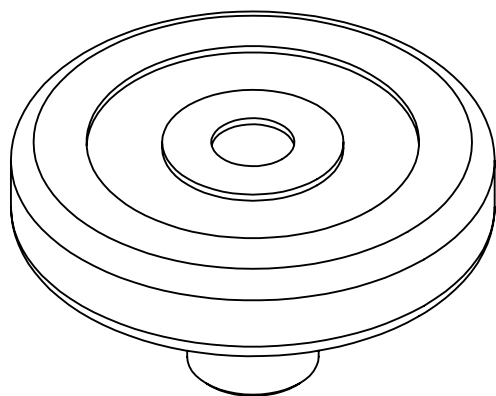

ISOMETRIC VIEW
FOR REFERENCE ONLY
DO NOT SCALE

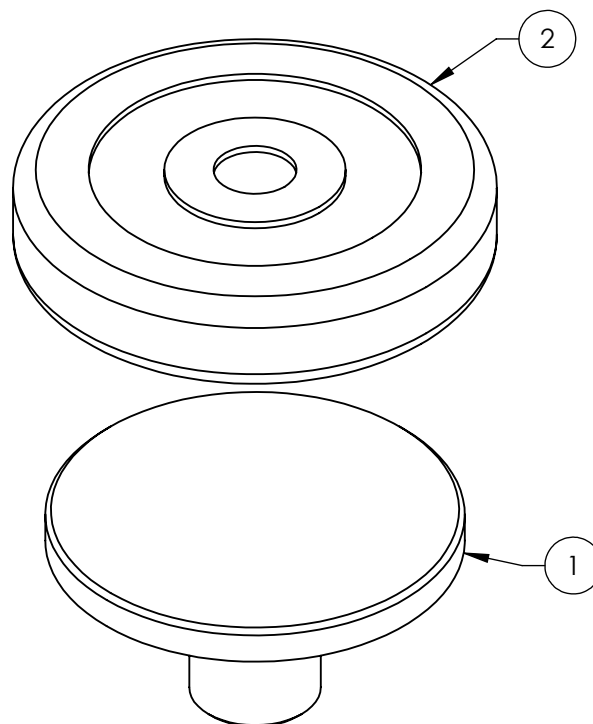

REVISION				
REV	DESCRIPTION	DATE	EDITED BY	ECO#
E	UPDATE BOM REVISION AND NEXT ASSEMBLY	12/19/2012	TM	00572
E-001	UPDATED NEXT ASSEMBLY	03/14/2013	TM	00586
E-002	UPDATED NEXT ASSEMBLY	06/21/2013	TM	00605
E-003	UPDATED NEXT ASSEMBLY	10/16/2014	TM	00663
E-004	UPDATED NEXT ASSEMBLY	03/24/2015	MR	00691
E-005	UPDATED NEXT ASSEMBLY	08/06/2015	JM	00715
E-006	UPDATED NEXT ASSEMBLY	11/24/2015	TM	00738
E-007	UPDATED NEXT ASSEMBLY	01/21/2016	TM	00739
E-008	UPDATED NEXT ASSEMBLY	05/25/2017	TS	00833
E-009	UPDATED NEXT ASSEMBLY	09/12/2017	TM	00867
F	UPDATED BOM REVISION	02/02/2018	TS	00922
G	UPDATED BOM REVISION AND NEXT ASSEMBLY	05/31/2018	TM	00953

WHERE USED	
QUICKJACK SERIES	MAXJAX
P9000 SERIES	D2-10 SERIES
MD-6XP	DMR-6
DMR-6	D2-8F
SP-7XE SERIES	HD-7BXT ACCY
GP-7 SERIES	
RJ-45LP	
RJW SERIES	
RBJ7000A	

NOTE: UNLESS OTHERWISE SPECIFIED.

- SEE SHIPPING INSTRUCTIONS FOR FINAL PACKAGING
- ASSEMBLE ITEMS AS SHOWN

NEXT ASSEMBLY	
5150561	5250273
5210163	5250288
5210194	5250293
5210214	5250297
5215865	5250298
5215866	5250316
5216062	
5250080	5250328
5250115	5250331
5250128	5250373
5250271	5250374

ITEM NO	PART NUMBER	DESCRIPTION	QTY	REV
1	5600588	ROUND LIFT PAD WELDMENT	1	C
2	5715017	ROUND LIFT PAD ADAPTER POLYURETHANE PAD	1	E

DO NOT SCALE DRAWING

DIMENSIONS ARE IN MM



NAME	DATE
DRAWN AC	12/30/2010
CHECKED CA	06/18/2018



PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS
THE SOLE PROPERTY OF BENDPAK INC. ANY
REPRODUCTION IN PART OR AS A WHOLE WITHOUT
THE WRITTEN PERMISSION OF BENDPAK INC. IS
PROHIBITED.

BP BendPak
1645 LEMONWOOD DR.
SANTA PAULA, CA 93060


TITLE: ROUND LIFT PAD
ADAPTER ASSEMBLY

SIZE	DWG. NO.	REV
A	5215507	G



SCALE: 1:2

SHEET 1 OF 1

REVISION				
REV	DESCRIPTION	DATE	EDITED BY	ECO#
A	PRODUCTION RELEASE, DERIVED FROM 5215729	09/13/2021	TM	01307

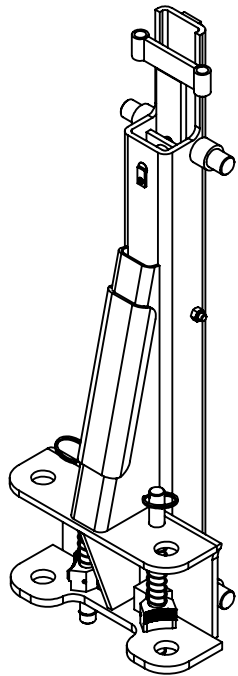

ISOMETRIC VIEW
FOR REFERENCE ONLY
DO NOT SCALE

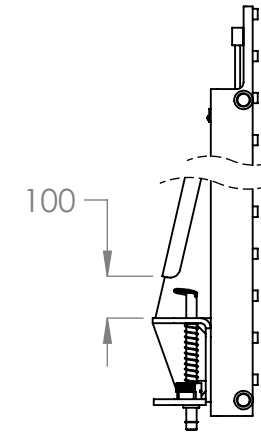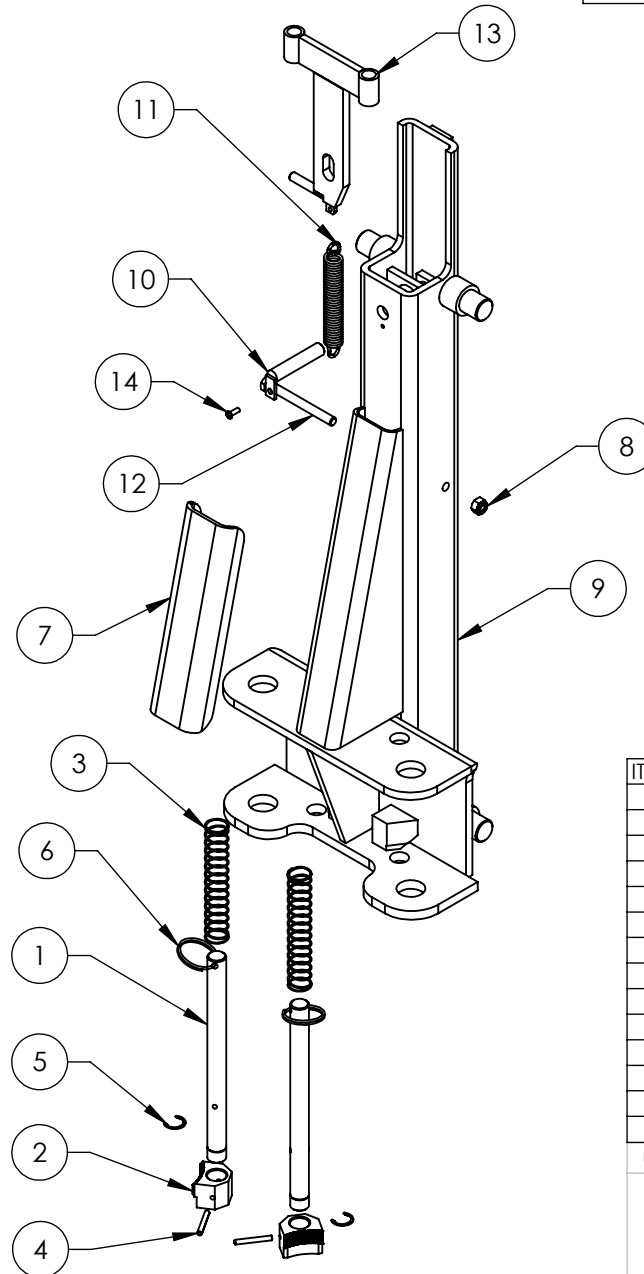

ITEM NO	PART NUMBER	DESCRIPTION	QTY	REV
1	5746098	GP, D2-8/10, XPR-9/10 Ø25mm GEAR SHAFT	2	F
2	5701052	D2/GP/M6K/XPR ARM INTERNAL GEAR STOP	2	F
3	5540133	GP-7, D2-8/10, XPR-9/10 LIFT HEAD SPRING	2	D
4	5505106	SPRING PIN M6 x 50	2	--
5	5540006	SNAP RING TRUARC 5103-100	2	--
6	5580219	KEYRING 56mm x 3mm	2	--
7	5930185	GP-7 LIFT HEAD GUSSET COVER	1	E
8	5535012	NUT M12 x 1.75 NL	1	--
9	5601725	GP-7LC LIFT HEAD WELDMENT	1	A
10	5601728	GP-7 CABLE BREAK CLEVIS PIN WELDMENT	1	A
11	5540146	SPRING Ø25mm x 178mm GP SERIES	1	A
12	5530796	HHB M12 x 1.75 x 120 CL 8.8	1	--
13	5601726	GP-7 POWER SIDE CABLE BREAK WELDMENT	1	A
14	5530148	BHPS M6 x 1.0 x 16	1	--

WHERE USED
GP-7LC
GP-7LCS

NOTE: UNLESS OTHERWISE SPECIFIED.

1. REFER TO MODEL FOR ADDITIONAL INFORMATION
2. SEE SHIPPING INSTRUCTIONS FOR FINAL PACKAGING
3. ASSEMBLE ITEMS AS SHOWN

NEXT ASSEMBLY
5216071
5216073

DO NOT SCALE DRAWING

DIMENSIONS ARE IN MM



NAME	DATE
DRAWN TM	09/13/2021
CHECKED OR	09/16/2021

THIRD ANGLE PROJECTION



PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS
THE SOLE PROPERTY OF BENDPAK INC. ANY
REPRODUCTION IN PART OR AS A WHOLE WITHOUT
THE WRITTEN PERMISSION OF BENDPAK INC. IS
PROHIBITED.


BendPak	
1645 LEMONWOOD DR. SANTA PAULA, CA 93060	

TITLE: GP-7LC POWER SIDE LIFT
HEAD ASSEMBLY



SIZE	DWG. NO.	REV
A	5216072	A

SCALE: 1:10

SHEET 1 OF 1

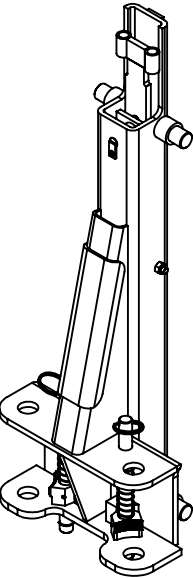

ISOMETRIC VIEW
FOR REFERENCE ONLY
DO NOT SCALE

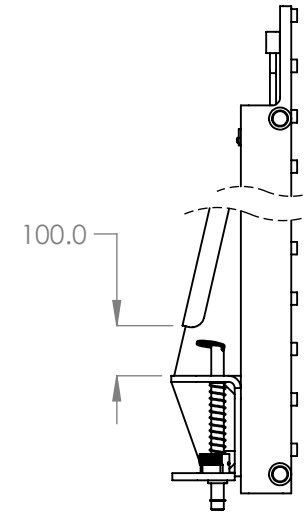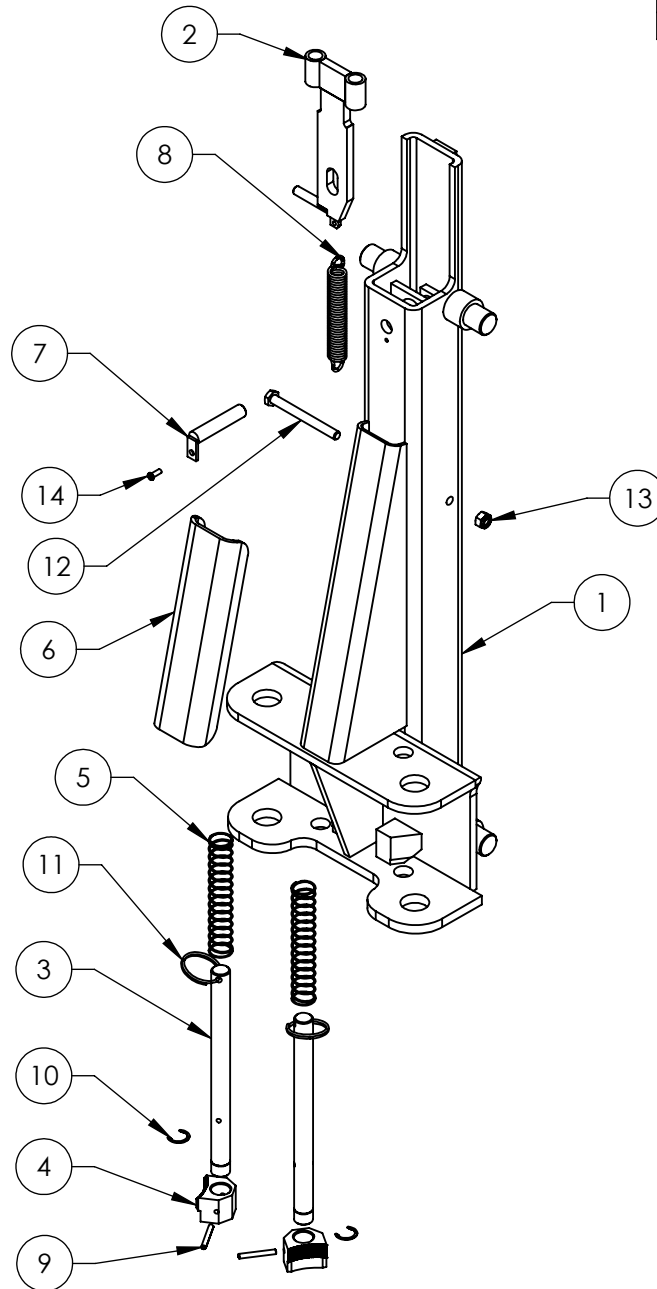

REVISION				
REV	DESCRIPTION	DATE	EDITED BY	ECO#
A	PRODUCTION RELEASE, DERIVED FROM 5215738	09/13/2021	TM	01307

ITEM NO	PART NUMBER	DESCRIPTION	QTY	REV
1	5601725	GP-7LC LIFT HEAD WELDMENT	1	A
2	5601727	GP-7 OFF SIDE CABLE BREAK PLATE WELDMENT	1	A
3	5746098	GP, D2-8/10, XPR-9/10 Ø25mm GEAR SHAFT	2	F
4	5701052	D2/GP/M6K/XPR ARM INTERNAL GEAR STOP	2	F
5	5540133	GP-7, D2-8/10, XPR-9/10 LIFT HEAD SPRING	2	D
6	5930185	GP-7 LIFT HEAD GUSSET COVER	1	E
7	5601728	GP-7 CABLE BREAK CLEVIS PIN WELDMENT	1	A
8	5540146	SPRING Ø25mm x 178mm GP SERIES	1	A
9	5505106	SPRING PIN M6 x 50	2	--
10	5540006	SNAP RING TRUARC 5103-100	2	--
11	5580219	KEYRING 56mm x 3mm	2	--
12	5530796	HHB M12 x 1.75 x 120 CL 8.8	1	--
13	5535012	NUT M12 x 1.75 NL	1	--
14	5530148	BHPS M6 x 1.0 x 16	1	--

WHERE USED
GP-7LC
GP-7LCS

NOTE: UNLESS OTHERWISE SPECIFIED.

- REFER TO MODEL FOR ADDITIONAL INFORMATION
- ASSEMBLE ITEMS AS SHOWN

NEXT ASSEMBLY
5216075
5216076

DO NOT SCALE DRAWING

DIMENSIONS ARE IN MM



NAME	DATE
DRAWN TM	09/13/2021
CHECKED OR	09/16/2021

THIRD ANGLE PROJECTION



PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF BENDPAK INC. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF BENDPAK INC. IS PROHIBITED.



1645 LEMONWOOD DR.
SANTA PAULA, CA 93060

TITLE: GP-7LC OFF SIDE LIFT
HEAD ASSEMBLY

SIZE	DWG. NO.	REV
A	5216074	A

SCALE: 1:10

SHEET 1 OF 1

PART SPECIFICATION FORM

ACP

BENDPAK Number:	5570129
MRP Description:	1/4" HYDRAULIC HOSE 31 CL-0400X
Date:	05/24/2018
ECO :	00950

1. Engineering Specification

Application:

1/4" HYDRAULIC HOSE

Detailed Description:

ONE or TWO BRAID STEEL WIRE HYDRAULIC HOSE

SIZE: 1/4" / 6mm I.D. MIN
 0.53" / 13.4mm O.D. MAX

SPECS: 5700PSI OR 393 BAR WORKING PRESSURE MINIMUM
 17100PSI OR 1179 BAR MINIMUM BURST PRESSURE MINIMUM
 3" / 80mm MIN BEND RADIUS

COLOR: BLACK

ADDITIONAL CONTACT INFORMATION:


Xin Yurong
 Shandong Ningjin High Energy Hose Co., Ltd.
 Tel: +86 534-5421821
 No. 7, Taishan Rd., Industrial Park, Ningjin County, Shandong, China



2. Vendor Information (Or for Reference)

Approved Vendor	Vendor Part #	Contact #	AUTHORIZED COMPONENT PROVIDER
1) Ningjin Hydraulic Hose Co.	5570129	+86 534-5421821	X
2)			
OR BENDPAK ENGINEERING APPROVED EQUIVALENT			

REVISION				
REV	DESCRIPTION	DATE	EDITED BY	ECO#
A	PRODUCTION RELEASE, DERIVED FROM 5570195, 5215730, AND 5215731	02/16/2021	CA	01273

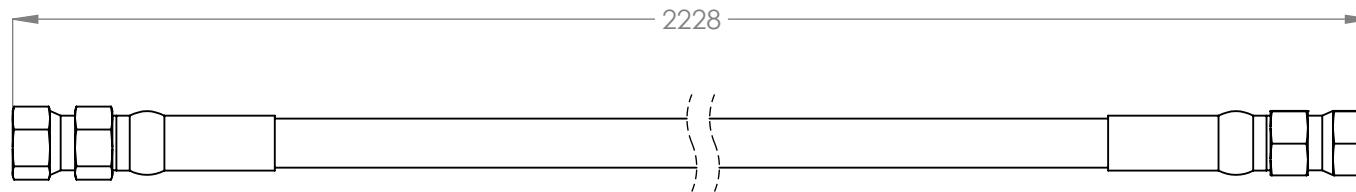

WHERE USED
GP-7LC

NOTE: UNLESS OTHERWISE SPECIFIED.


1. FOR ITEM 1 SPECIFICATIONS REFER TO PART SPECIFICATION FORM
2. (*)ITEM 1 QTY FOR REFERENCE ONLY

NEXT ASSEMBLY
5250373

ITEM NO	PART NUMBER	DESCRIPTION	QTY	REV
1	5570129	Ø6.4 ID HYDRAULIC HOSE	2162mm*	--
2	5550325	FTG NPL Ø1/4 CRIMP x -04 JIC	2	--

DO NOT SCALE DRAWING		NAME	DATE	 BendPak. 1645 LEMONWOOD DR. SANTA PAULA, CA 93060		
DRAWN		CA	02/16/2021			
CHECKED						
DIMENSIONS ARE IN MM TOLERANCES: 0. = ±1.5 0.0 = ±1.0 0.00 = ±0.25 0.000 = ±0.13 SURFACE FINISH 1.6 ISO Ra µm FOR MACHINED SURFACES UNLESS OTHERWISE SPECIFIED		THIRD ANGLE PROJECTION		TITLE: HYDRAULIC HOSE ASSEMBLY Ø6.35 x 2228mm DS		
						
Y		PROPRIETARY AND CONFIDENTIAL THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF BENDPAK INC. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF BENDPAK INC. IS PROHIBITED.		SIZE	DWG. NO.	REV
				A	5570249	A
				SCALE: 1:2		SHEET 1 OF 1

REVISION				
REV	DESCRIPTION	DATE	EDITED BY	ECO#
A	PRODUCTION RELEASE, DERIVED FROM 5595935	08/24/2017	TM	00874
B	WAS 1565 NOW 1320	01/08/2018	TM	00916
C	ADDED 5535357	02/13/2020	TM	01107

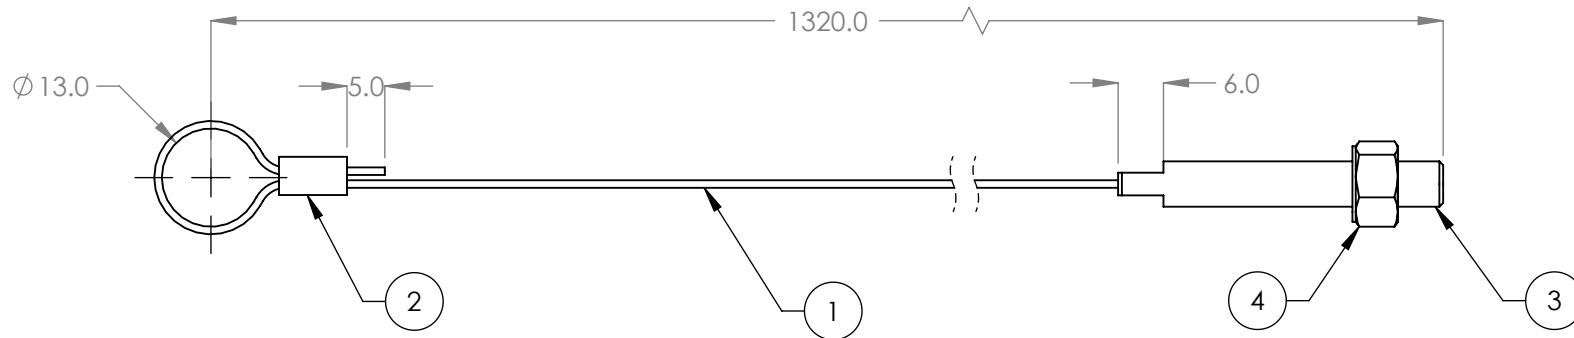

WHERE USED
GP-7LC

NOTE: UNLESS OTHERWISE SPECIFIED.


1. FOR ITEM 1 SPECIFICATIONS REFER TO PART SPECIFICATION FORM
2. LENGTH SHOWN IS AFTER SWAGING
3. ITEM 1 QTY FOR REFERENCE ONLY
4. CRIMP 5530339 ONTO CABLE
5. THREAD 5535357 ONTO CABLES FOR SHIPMENT

ITEM NO	PART NUMBER	DESCRIPTION	QTY	REV
1	5595549	CABLE SAFETY Ø1.2mm	1360mm*	-
2	5580212	Ø1.2mm OVAL CABLE CRIMP	1	A
3	5530339	GP-7 MICRO SWITCH CABLE CONNECTOR	1	A
4	5535357	NUT M6 x 1.0 NL	1	-

DO NOT SCALE DRAWING		NAME	DATE	 BendPak. 1645 LEMONWOOD DR. SANTA PAULA, CA 93060
DRAWN		TM	08/24/2017	
CHECKED		OR	04/09/2020	
DIMENSIONS ARE IN MM TOLERANCES: 0. = ±1.5 0.0 = ±0.5 SURFACE FINISH 1.6 ISO Ra µm FOR MACHINED SURFACES UNLESS OTHERWISE SPECIFIED		THIRD ANGLE PROJECTION		TITLE: GP-7LC Ø1.2 x 1320mm MICRO SWITCH CABLE
				
PROPRIETARY AND CONFIDENTIAL THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF BENDPAK INC. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF BENDPAK INC. IS PROHIBITED.				
Y	SIZE		DWG. NO.	REV
	A		5595550	C
SCALE: 1:1			SHEET 1 OF 1	

NEXT ASSEMBLY
5250373

REVISION				
REV	DESCRIPTION	DATE	EDITED BY	ECO#
A	PRODUCTION RELEASE, DERIVED FROM 5595414	05/23/2017	TS	00833
B	WAS 6510 NOW 6566, WAS 6819 NOW 6522, WAS 6786 NOW 6489, UPDATED BOM REVISION	12/19/2017	TM	00900
C	ADDED 5545025 AND 5535008	02/13/2020	TM	01107

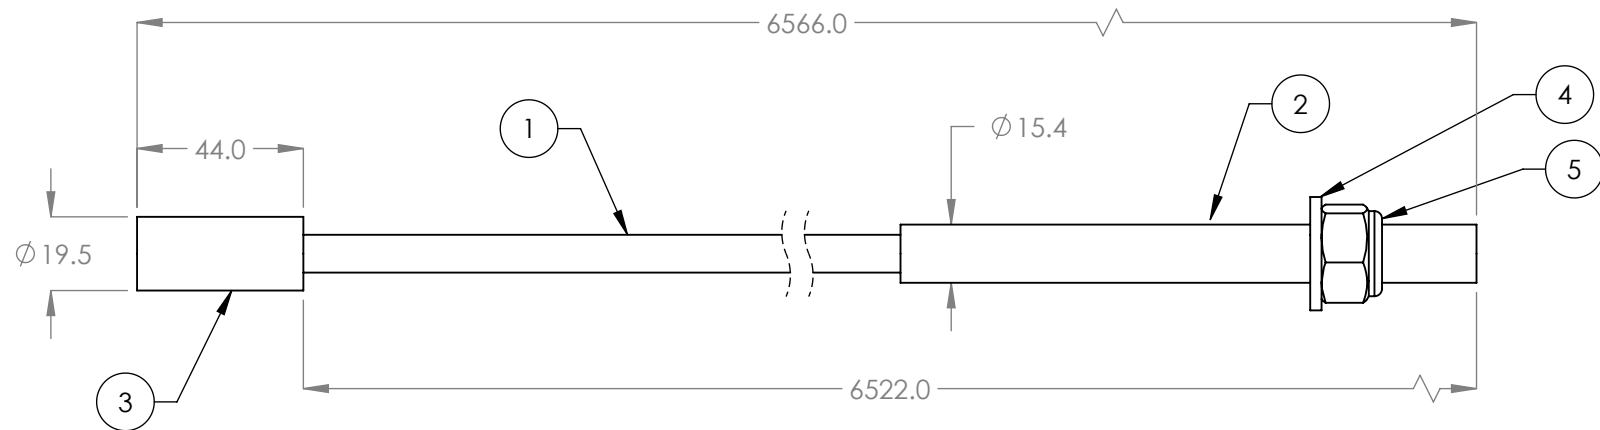

WHERE USED
GP-7LC

NOTE: UNLESS OTHERWISE SPECIFIED.


- FOR ITEM 1 SPECIFICATIONS REFER TO PART SPECIFICATION FORM
- LENGTH SHOWN IS AFTER SWAGING
- ITEM 1 QTY FOR REFERENCE ONLY
- THREAD 5535008 WITH 5545025 ONTO CABLES FOR SHIPMENT

NEXT ASSEMBLY
5250373

ITEM NO	PART NUMBER	DESCRIPTION	QTY	REV
1	5595011	CABLE, LIFTING Ø10mm	6489mm*	-
2	5746158	Ø10 THREADED CABLE CONNECTOR (16mm)	1	A
3	5746021	Ø10 CABLE END CONNECTOR	1	E
4	5545025	WASHER M16 x 30mm FLAT	1	-
5	5535008	NUT M16 x 2 NL	1	-

DO NOT SCALE DRAWING		NAME	DATE	 1645 LEMONWOOD DR. SANTA PAULA, CA 93060
DRAWN		TM	05/23/2017	
CHECKED		OR	04/09/2020	
THIRD ANGLE PROJECTION				TITLE:
DIMENSIONS ARE IN MM TOLERANCES: 0. = ±1.5 0.0 = ±0.5 SURFACE FINISH 1.6 ISO Ra µm FOR MACHINED SURFACES UNLESS OTHERWISE SPECIFIED				GP-7LC CABLE ASSEMBLY Ø10 x 6566mm ST
PROPRIETARY AND CONFIDENTIAL THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF BENDPAK INC. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF BENDPAK INC. IS PROHIBITED.		SIZE	DWG. NO.	REV
		A	5595932	C
		SCALE: 1:2		SHEET 1 OF 1

REVISION				
REV	DESCRIPTION	DATE	EDITED BY	ECO#
A	PRODUCTION RELEASE, DERIVED FROM 5595446	05/22/2017	TS	00833

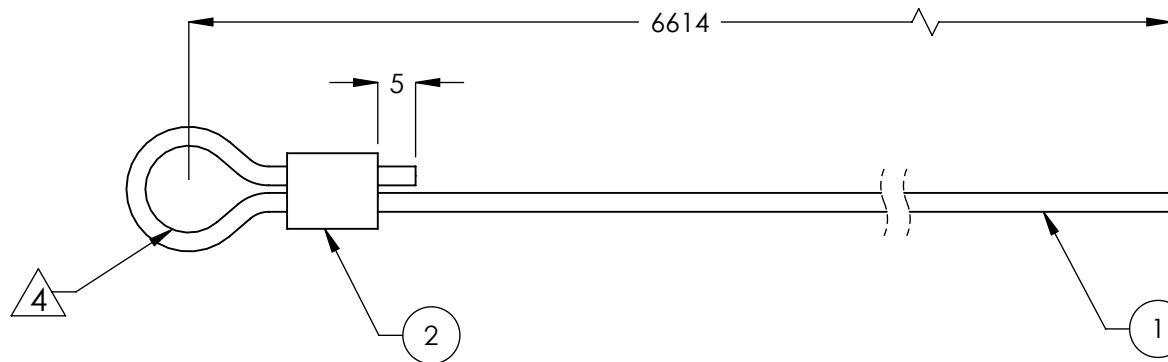

NOTE: UNLESS OTHERWISE SPECIFIED.


1. FOR ITEM 1 SPECIFICATIONS REFER TO PART SPECIFICATION FORM
2. LENGTH SHOWN IS AFTER SWAGING
3. ITEM 1 QTY FOR REFERENCE ONLY



INNER EYE LOOP DIAMETER OF Ø15MM


ITEM NO	PART NUMBER	DESCRIPTION		QTY	REV
1	5595682	CABLE SAFETY Ø2.4mm		6654mm*	-
2	5580210	Ø2.4mm OVAL CABLE CRIMP		1	A

DO NOT SCALE DRAWING		NAME	DATE	 1645 LEMONWOOD DR. SANTA PAULA, CA 93060
DRAWN		TS	05/22/2017	
CHECKED		--	--	

DIMENSIONS ARE IN MM TOLERANCES: 0. = ±1.5 0.0 = ±0.5 ANGULAR: 0. = ±2° SURFACE FINISH 1.6 ISO Ra µm FOR MACHINED SURFACES UNLESS OTHERWISE SPECIFIED	THIRD ANGLE PROJECTION		TITLE: GP-7LC Ø2.4 x 6614mm SAFETY CABLE
			
	PROPRIETARY AND CONFIDENTIAL THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF BENDPAK INC. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF BENDPAK INC. IS PROHIBITED.		

Y	SIZE	DWG. NO.	REV
	A	5595933	A
	SCALE: 1:1		SHEET 1 OF 1

REVISION				
REV	DESCRIPTION	DATE	EDITED BY	ECO#
A	PRODUCTION RELEASE, DERIVED FROM 5595463	05/23/2017	TS	00833
B	WAS 3617 NOW 3575, WAS 3573 NOW 3531,	12/19/2017	TM	00900
B-001	WAS 3540 NOW 3498, UPDATED BOM REVISION UPDATED NEXT ASSEMBLY	08/21/2018	TM	00972
C	ADDED 5545025 AND 5535008	02/13/2020	TM	01107

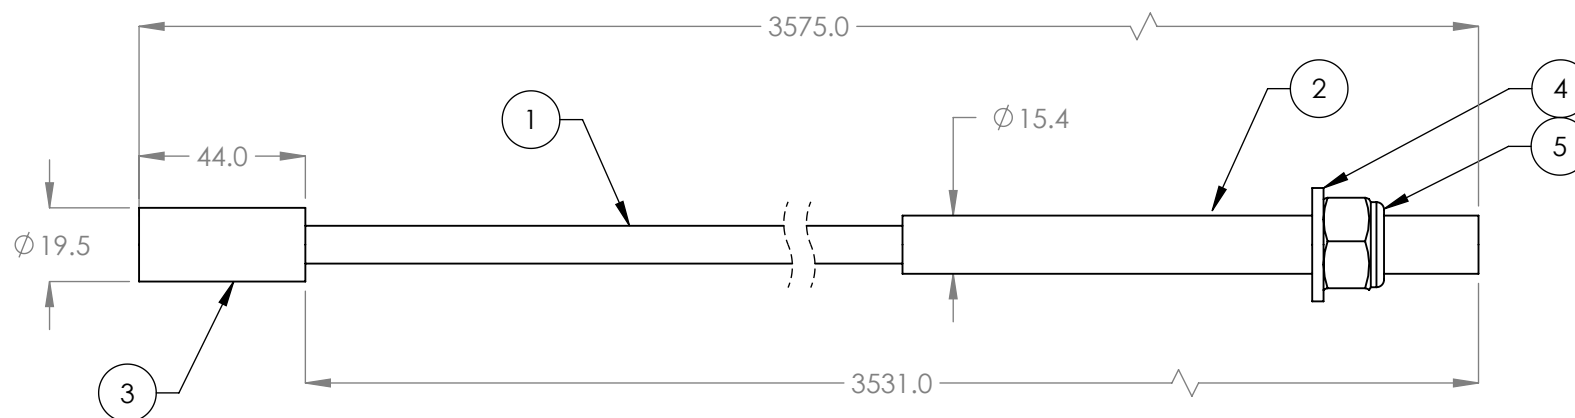

WHERE USED
GP-7LC

NOTE: UNLESS OTHERWISE SPECIFIED.

- FOR ITEM 1 SPECIFICATIONS REFER TO PART SPECIFICATION FORM
- LENGTH SHOWN IS AFTER SWAGING
- ITEM 1 QTY FOR REFERENCE ONLY
- THREAD 5535008 WITH 5545025 ONTO CABLES FOR SHIPMENT

NEXT ASSEMBLY
5250373

ITEM NO	PART NUMBER	DESCRIPTION	QTY	REV
1	5595011	CABLE, LIFTING Ø10mm	3498mm*	-
2	5746158	Ø10 THREADED CABLE CONNECTOR (16mm)	1	-
3	5746021	Ø10 CABLE END CONNECTOR	1	E
4	5545025	WASHER M16 x 30mm FLAT	1	A
5	5535008	NUT M16 x 2 NL	1	A

DO NOT SCALE DRAWING

NAME	DATE
DRAWN TS	05/23/2017
CHECKED OR	04/09/2020

DIMENSIONS ARE IN MM
TOLERANCES:
0. = ±1.5
0.0 = ±0.5

SURFACE FINISH 1.6 ISO Ra µm
FOR MACHINED SURFACES
UNLESS OTHERWISE SPECIFIED



PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS
THE SOLE PROPERTY OF BENDPAK INC. ANY
REPRODUCTION IN PART OR AS A WHOLE WITHOUT
THE WRITTEN PERMISSION OF BENDPAK INC. IS
PROHIBITED.




TITLE:
GP-7LC CABLE ASSEMBLY
Ø10 x 3575mm ST



SIZE	DWG. NO.	REV
A	5595934	C

SCALE: 1:2

SHEET 1 OF 1

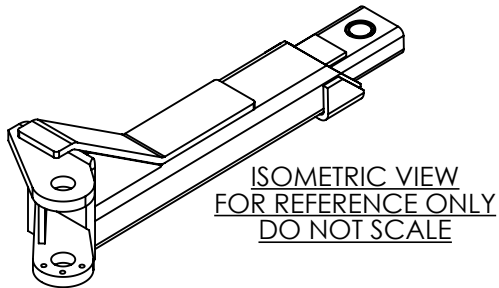

REVISION				
REV	DESCRIPTION	DATE	EDITED BY	ECO#
Q	UPDATED BOM REVISION	05/30/2018	TM	00953
R	ADDED (1) 5737002, WAS 180±1 NOW (180), WAS (128) NOW 168±1, WAS 51 NOW 44.8, WAS 27 NOW 26.4, REMOVED 5 ADDED 91.1°, UPDATED BOM REVISIONS	03/22/2019	TM	01065
T T-001	REMOVED WEIGHT CAPACITY CUT ADDED GLOSS PAINT NOTE, WEIGHT CAPACITY AND MANUFACTURER STAMP	05/21/2019 02/07/2020	TS TM	01086 01107

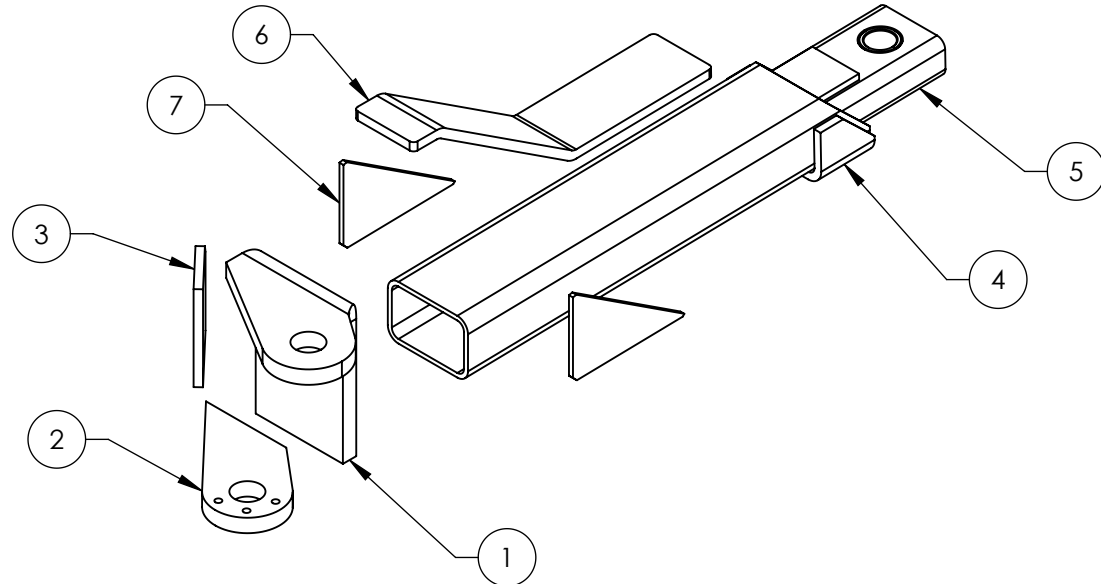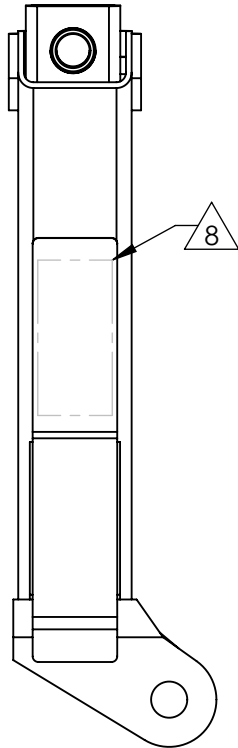

WHERE USED
GP-7 SERIES


NOTE: UNLESS OTHERWISE SPECIFIED.

- REFER TO MODEL FOR ADDITIONAL INFORMATION
- BREAK AND DEBURR ALL SHARP EDGES 0.3mm
- REMOVE ALL WELD SPLATTER
- MASK ALL BORES BEFORE PAINTING
- DIMENSIONS SHOWN ARE AFTER PAINTING
- PAINT BENDPAK YELLOW (RAL-1018) 20% GLOSS
- 5620532 MUST SLIDE FREELY
- 10mm LETTER HEIGHT, 3mm ∇ MARK IN APPROXIMATE LOCATION WITH THE FOLLOWING :
MANUFACTURER CODE
1750 lb (795 kg)



ITEM NO	PART NUMBER	DESCRIPTION	QTY	REV
1	5701433	GP-7 90° ARM EAR R.H.	1	F
2	5701438	GP-7 90° BOLT ON EAR PLATE	1	F
3	5735416	GP-7 LIFT ARM GUSSET	1	D
4	5620534	GP-7 OUTER SQUARE TUBE WELDMENT (602mm)	1	E
5	5620532	GP-7 TWO STAGE INNER ARM WELDMENT (629mm)	1	F
6	5736524	GP-7 90° ARM SUPPORT	1	H
7	5737002	GP-7 90° ARM SUPPORT GUSSET PLATE	2	E

DO NOT SCALE DRAWING		NAME	DATE	1645 LEMONWOOD DR. SANTA PAULA, CA 93060
DRAWN		TM	05/31/2012	
CHECKED		OR	04/08/2020	
THIRD ANGLE PROJECTION				TITLE:
DIMENSIONS ARE IN MM TOLERANCES: 0. = ±1.5 0.0 = ±0.5		SURFACE FINISH 1.6 ISO Ra µm FOR MACHINED SURFACES UNLESS OTHERWISE SPECIFIED		GP-7 90° MEDIUM ARM WELDMENT R.H.
PROPRIETARY AND CONFIDENTIAL THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF BENDPAK INC. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF BENDPAK INC. IS PROHIBITED.		SIZE DWG. NO.		REV
A 5600684		T		
SCALE: 1:5		SHEET 1 OF 2		

NEXT ASSEMBLY
5215557

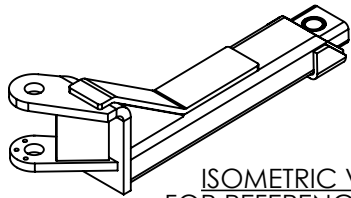

ISOMETRIC VIEW
FOR REFERENCE ONLY
DO NOT SCALE

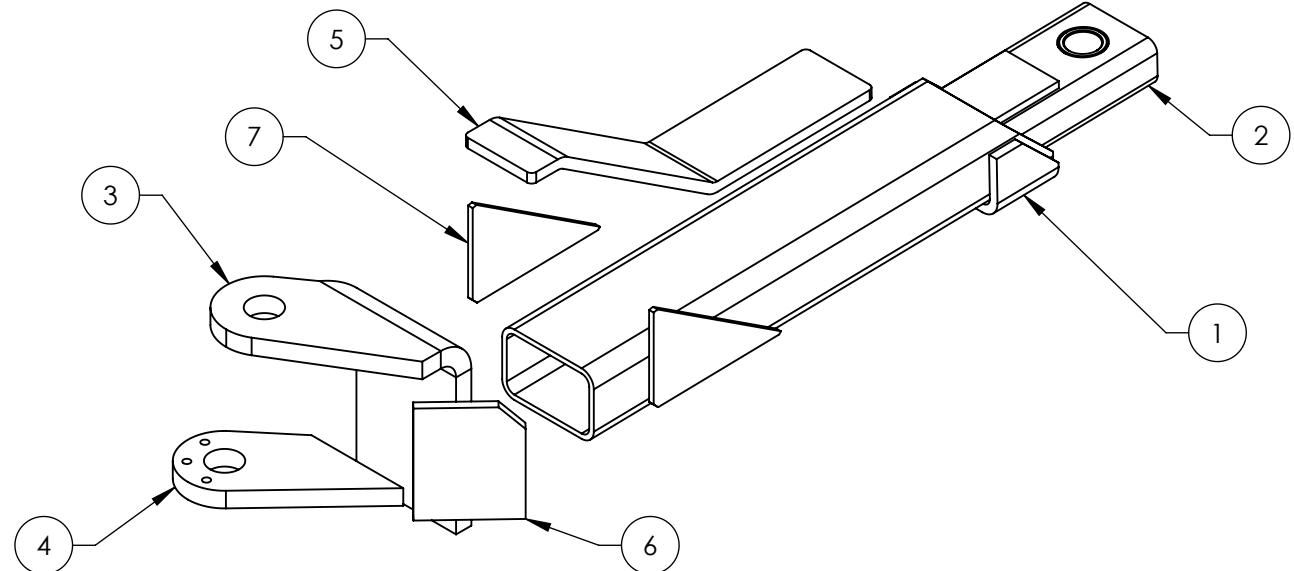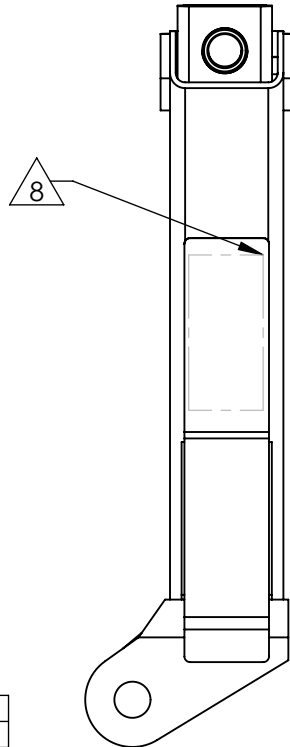

WHERE USED
GP-7 SERIES

NOTE: UNLESS OTHERWISE SPECIFIED.

1. REFER TO MODEL FOR ADDITIONAL INFORMATION
2. BREAK AND DEBURR ALL SHARP EDGES 0.3mm
3. REMOVE ALL WELD SPLATTER
4. MASK ALL BORES BEFORE PAINTING
5. DIMENSIONS SHOWN ARE AFTER PAINTING
6. PAINT BENDPAK YELLOW (RAL-1018) 20% GLOSS
7. 5620532 MUST SLIDE FREELY
8. 10mm LETTER HEIGHT, 3mm ∇ MARK IN APPROXIMATE LOCATION WITH THE FOLLOWING :
MANUFACTURER CODE
1750 lb (795 kg)


NEXT ASSEMBLY
5215554

REVISION				
REV	DESCRIPTION	DATE	EDITED BY	ECO#
R	UPDATED BOM REVISION	05/03/2018	TM	00953
T	ADDED (1) 5737002, WAS 180±1 NOW (180), WAS (128) NOW 168±1, WAS 51 NOW 44.8, WAS 27 NOW 26.4, REMOVED 5 ADDED 91.1°, UPDATED BOM REVISIONS	03/22/2019	TM	01065
U U-001	REMOVED WEIGHT CAPACITY ADDED GLOSS PAINT NOTE, WEIGHT CAPACITY AND MANUFACTURER STAMP	05/21/2019 02/07/2020	TS TM	01086 01107




ITEM NO	PART NUMBER	DESCRIPTION	QTY	REV
1	5620534	GP-7 OUTER SQUARE TUBE WELDMENT (602mm)	1	E
2	5620532	GP-7 TWO STAGE INNER ARM WELDMENT (629mm)	1	F
3	5701430	GP-7 90° ARM EAR L.H.	1	F
4	5701438	GP-7 90° BOLT ON EAR PLATE	1	F
5	5736524	GP-7 90° ARM SUPPORT	1	H
6	5735416	GP-7 LIFT ARM GUSSET	1	D
7	5737002	GP-7 90° ARM SUPPORT GUSSET PLATE	2	E

DO NOT SCALE DRAWING		NAME	DATE	 1645 LEMONWOOD DR. SANTA PAULA, CA 93060 TITLE: GP-7 90° MEDIUM ARM WELDMENT L.H. SIZE DWG. NO. REV A 5600687 U
DIMENSIONS ARE IN MM TOLERANCES: 0. = ±1.5 0.0 = ±0.5 SURFACE FINISH 1.6 ISO Ra µm FOR MACHINED SURFACES UNLESS OTHERWISE SPECIFIED	DRAWN	TM	05/31/2012	
	CHECKED	OR	04/08/2020	
THIRD ANGLE PROJECTION				SCALE: 1:5 SHEET 1 OF 2

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS
THE SOLE PROPERTY OF BENDPAK INC. ANY
REPRODUCTION IN PART OR AS A WHOLE WITHOUT
THE WRITTEN PERMISSION OF BENDPAK INC. IS
PROHIBITED.

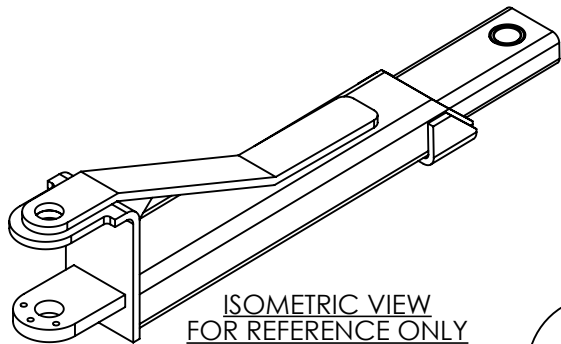

ISOMETRIC VIEW
FOR REFERENCE ONLY
DO NOT SCALE

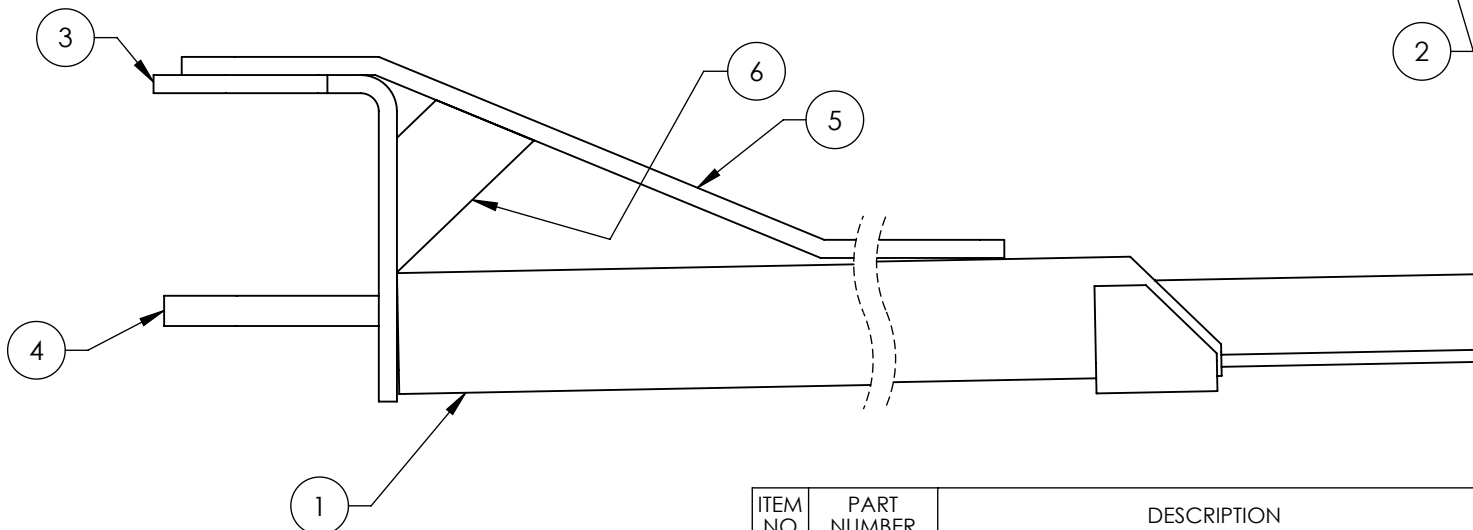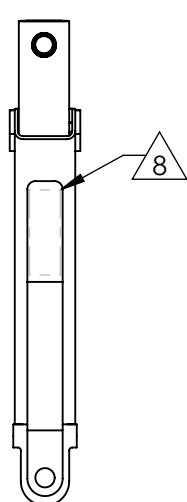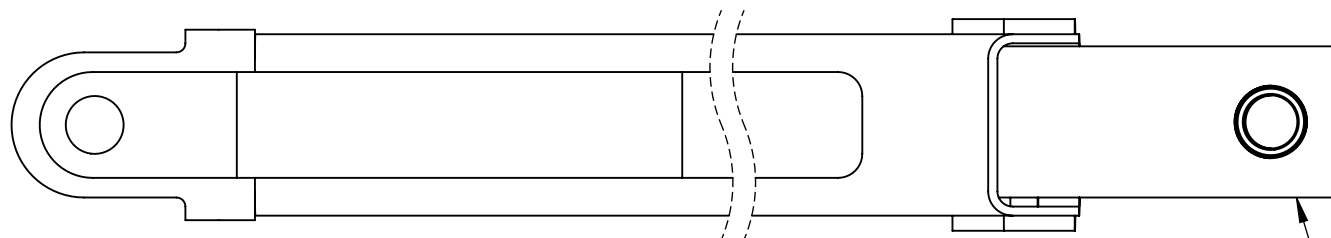

WHERE USED
GP-7 SERIES

NOTE: UNLESS OTHERWISE SPECIFIED.


1. REFER TO MODEL FOR ADDITIONAL INFORMATION
2. BREAK AND DEBURR ALL SHARP EDGES 0.3mm
3. REMOVE ALL WELD SPLATTER
4. MASK ALL BORES BEFORE PAINTING
5. DIMENSIONS SHOWN ARE AFTER PAINTING
6. PAINT BENDPAK YELLOW (RAL-1018) 20% GLOSS
7. 5620501 MUST SLIDE FREELY
8. 10mm LETTER HEIGHT, 3mm ∇ MARK IN APPROXIMATE LOCATION WITH THE FOLLOWING :
MANUFACTURER CODE
1750 lb (795 kg)

REVISION				
REV	DESCRIPTION	DATE	EDITED BY	ECO#
R	UPDATED BOM REVISIONS	05/01/2018	CA	00943
T	UPDATED BOM REVISION	05/30/2018	TM	00953
U U-001	REMOVED CAPACITY RATING ADDED GLOSS PAINT NOTE, WEIGHT CAPACITY AND MANUFACTURER STAMP	05/21/2019 02/07/2020	TS TM	01086 01107


ITEM NO	PART NUMBER	DESCRIPTION	QTY	REV
1	5620504	GP-7 OUTER SQUARE TUBE WELDMENT (625mm)	1	D
2	5620501	GP-7 TWO STAGE INNER ARM WELDMENT (652mm)	1	D
3	5701434	GP-7 ARM EAR	1	F
4	5701432	GP-7 BOLT ON EAR PLATE	1	C
5	5736522	GP-7 LONG ARM SUPPORT	1	K
6	5737003	GP-7 ARM SUPPORT GUSSET PLATE	1	D

DO NOT SCALE DRAWING		NAME		DATE		 BendPak					
DIMENSIONS ARE IN MM TOLERANCES: 0. = ±1.5 0.0 = ±0.5		DRAWN		TM		06/14/2012					
		CHECKED		OR		04/08/2020					
		THIRD ANGLE PROJECTION						TITLE: GP-7 LONG ARM WELDMENT			
SURFACE FINISH 1.6 ISO Ra µm FOR MACHINED SURFACES UNLESS OTHERWISE SPECIFIED				SIZE		DWG. NO.			REV		
		PROPRIETARY AND CONFIDENTIAL THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF BENDPAK INC. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF BENDPAK INC. IS PROHIBITED.						A		5600688	
		SCALE: 1:5						SHEET 1 OF 2			


REVISION				
REV	DESCRIPTION	DATE	EDITED BY	ECO#
B	ADDED SECTION E VIEW, ADDED 1397 ON SHEET 2	10/25/2017	TS	00895
C	ADDED CRITICAL DIMENSIONS AND GLOSS PAINT NOTE, UPDATED BOM REVISION	02/13/2020	TM	01107
D	UPDATED BOM REVISION	02/18/2021	CA	01273



ISOMETRIC VIEW
FOR REFERENCE ONLY
DO NOT SCALE

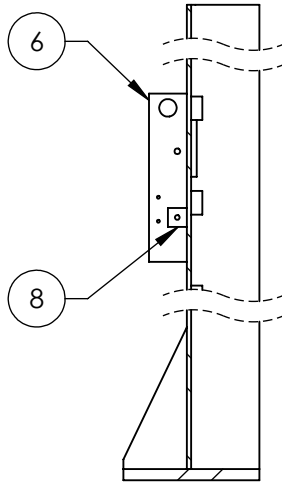

SECTION B-B


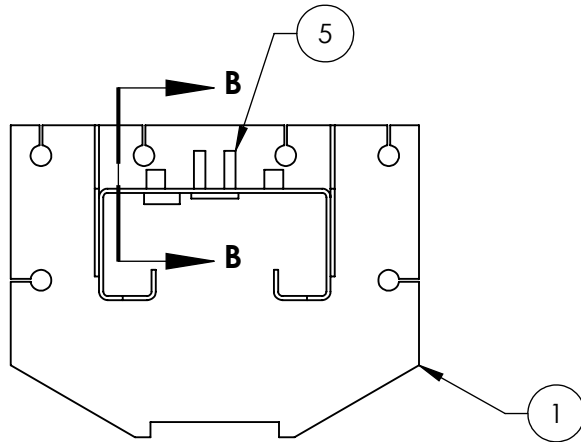


SECTION A-A
SCALE 1 : 8

WHERE USED
GP-7LC

NOTE: UNLESS OTHERWISE SPECIFIED.

1. REFER TO MODEL FOR ADDITIONAL INFORMATION
2. BREAK AND DEBURR ALL SHARP EDGES 0.3mm
3. REMOVE ALL WELD SPLATTER
4. MASK THREADS BEFORE PAINTING
5. DIMENSIONS SHOWN ARE AFTER PAINTING
6. PAINT BENDPAK (RAL-7024) 20% GLOSS

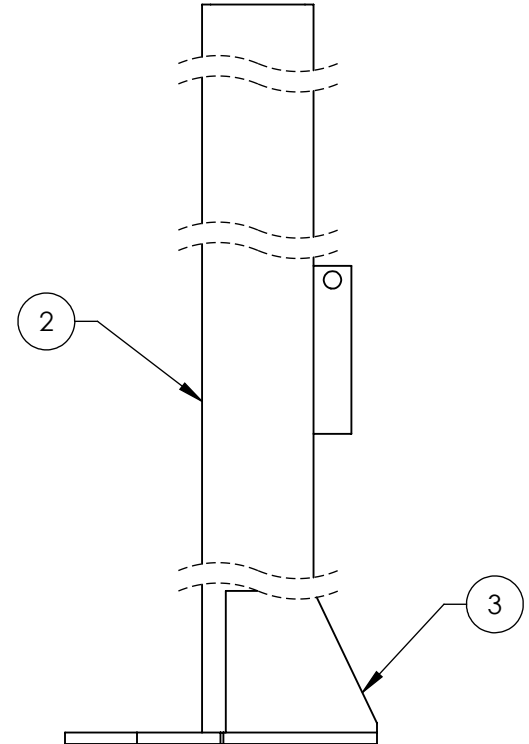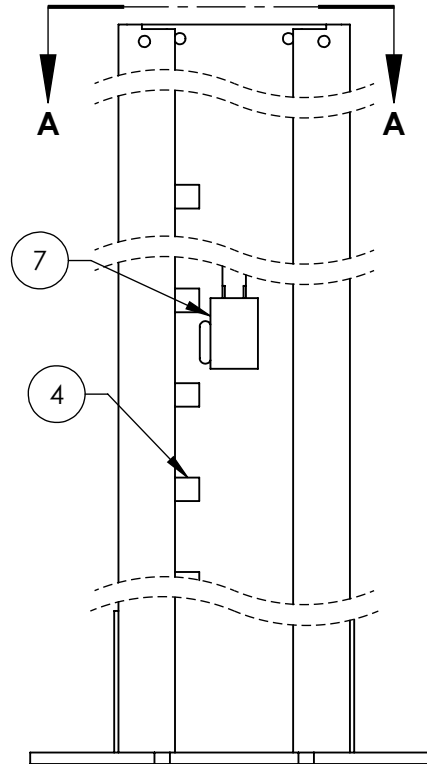

ITEM NO	PART NUMBER	DESCRIPTION	QTY	REV
1	5730062	GP-7 POST BASE PLATE	1	B
2	5701540	GP-7LC BARE POST	1	C
3	5730063	GP-7 SERIES POST GUSSET	2	A
4	5735417	SAFETY STOP, SMALL	11	A
5	5736497	10AP/GP-7 SAFETY RELEASE PLATE	1	C
6	5736495	GP-7 SAFETY RELEASE PLATE R.H.	1	C
7	5735392	GP STIFFENING PLATE	1	A
8	5760001	SAFETY COVER BLOCK	2	C

DO NOT SCALE DRAWING

DIMENSIONS ARE IN MM
TOLERANCES:

0. = ± 1.5
0.0 = ± 0.5

SURFACE FINISH 1.6 ISO R_a μ m
FOR MACHINED SURFACES
UNLESS OTHERWISE SPECIFIED

NAME DATE
DRAWN TS 05/17/2017
CHECKED OR 2/22/2021

THIRD ANGLE PROJECTION



PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS
THE SOLE PROPERTY OF BENDPAK INC. ANY
REPRODUCTION IN PART OR AS A WHOLE WITHOUT
THE WRITTEN PERMISSION OF BENDPAK INC. IS
PROHIBITED.

BendPak.

1645 LEMONWOOD DR.
SANTA PAULA, CA 93060

TITLE:
GP-7LC POST WELDMENT


SIZE DWG. NO. REV
A 5601175 D

SCALE: 1:8

SHEET 1 OF 3

NEXT ASSEMBLY
5216071
5216075

REVISION				
REV	DESCRIPTION	DATE	EDITED BY	ECO#
A A-001	PRODUCTION RELEASE, DERIVED FROM 5600693 10mm WELD WAS BOTH SIDES NOW ALL AROUND (pg2), ADDED CRITICAL DIMENSIONS, GLOSS PAINT NOTE	06/05/2017 02/14/2020	TM TM	00833 01107

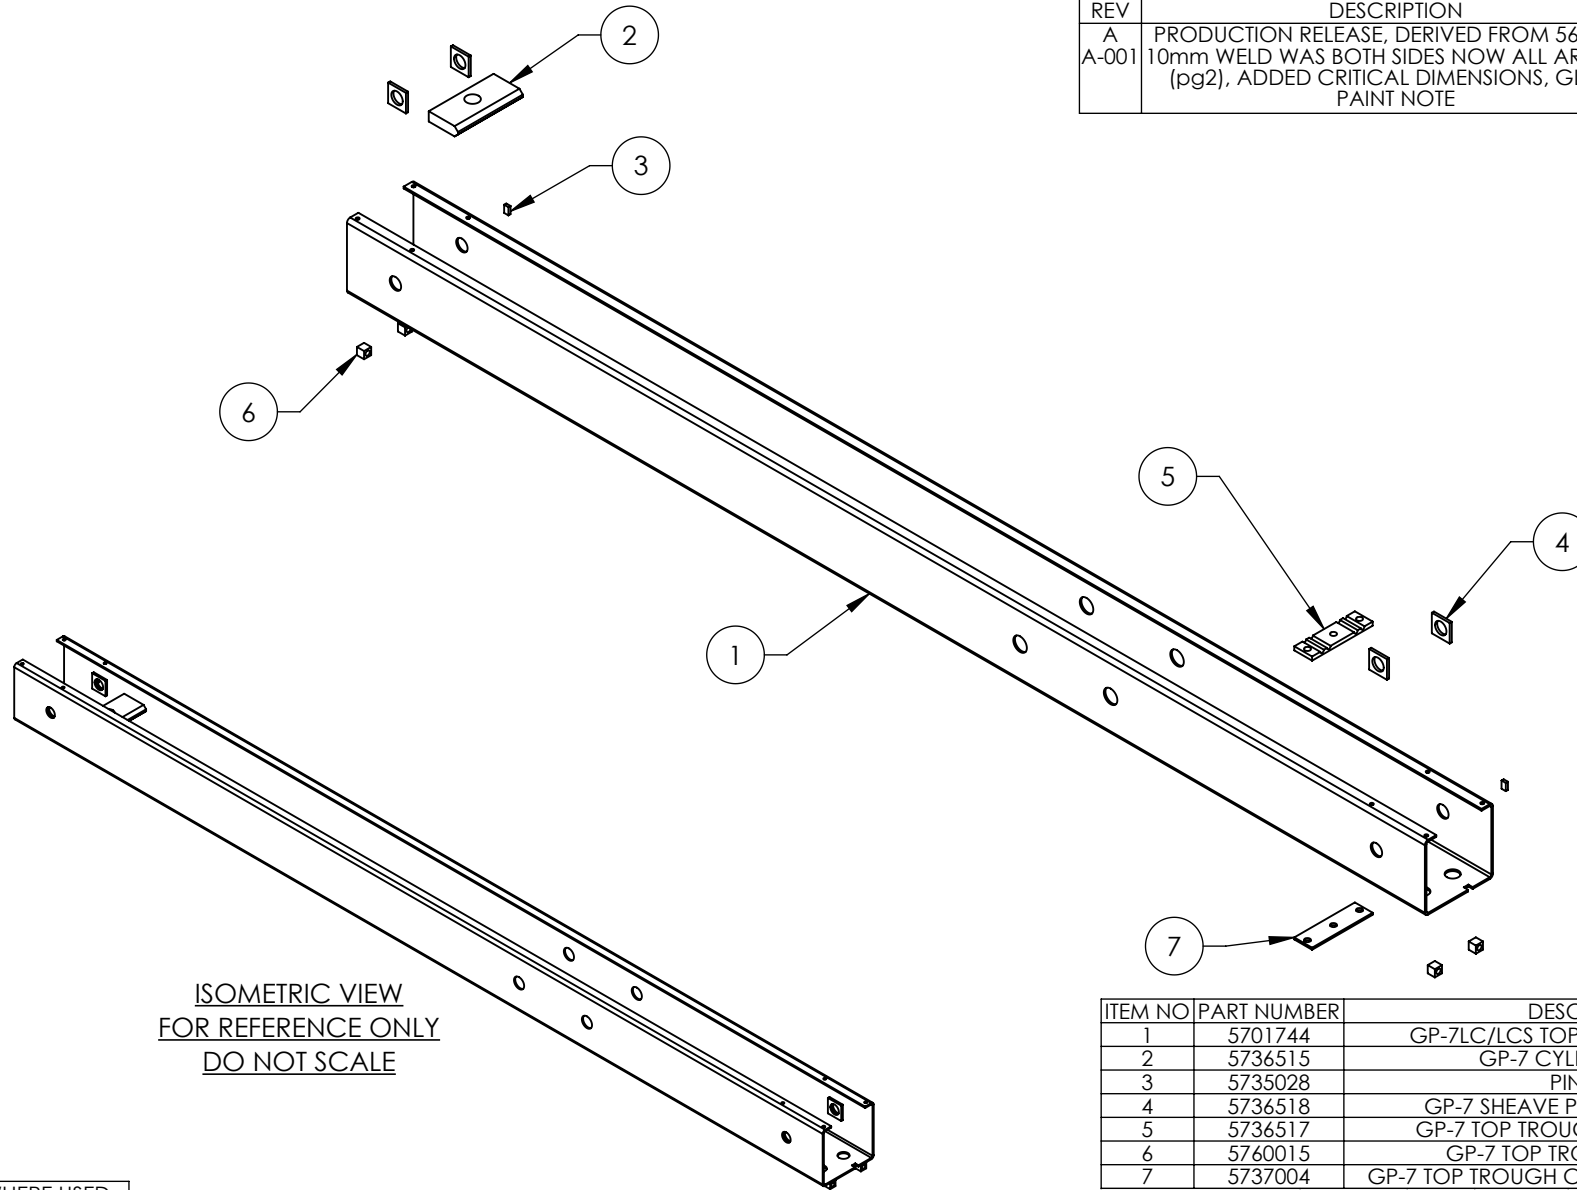

ISOMETRIC VIEW
FOR REFERENCE ONLY
DO NOT SCALE

WHERE USED
GP-7LC
GP-7LCS

NOTE: UNLESS OTHERWISE SPECIFIED.

- REFER TO MODEL FOR ADDITIONAL INFORMATION
- BREAK AND DEBURR ALL SHARP EDGES 0.3mm
- REMOVE ALL WELD SPLATTER
- DIMENSIONS SHOWN ARE AFTER PAINTING
- PAINT BENDPAK GRAY (RAL-7024) 20% GLOSS

ITEM NO	PART NUMBER	DESCRIPTION	QTY	REV
1	5701744	GP-7LC/LCS TOP TROUGH CHANNEL	1	A
2	5736515	GP-7 CYLINDER CLEVIS	1	A
3	5735028	PIN STOP	2	B
4	5736518	GP-7 SHEAVE PIN STIFFENER PLATE	4	A
5	5736517	GP-7 TOP TROUGH CABLE TIE PLATE	1	C
6	5760015	GP-7 TOP TROUGH TIE BLOCK	4	A
7	5737004	GP-7 TOP TROUGH CABLE TIE PLATE SUPPORT	1	A

DO NOT SCALE DRAWING

DIMENSIONS ARE IN MM
TOLERANCES:
0. = ±1.5
0.0 = ±0.5

SURFACE FINISH 1.6 ISO Ra µm
FOR MACHINED SURFACES
UNLESS OTHERWISE SPECIFIED

NAME	DATE
DRAWN TM	06/02/2017
CHECKED OR	04/08/2020

THIRD ANGLE PROJECTION



PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS
THE SOLE PROPERTY OF BENDPAK INC. ANY
REPRODUCTION IN PART OR AS A WHOLE WITHOUT
THE WRITTEN PERMISSION OF BENDPAK INC. IS
PROHIBITED.



1645 LEMONWOOD DR.
SANTA PAULA, CA 93060

TITLE: GP-7LC/LCS TOP
TROUGH WELDMENT


SIZE	DWG. NO.	REV
A	5601176	A

SCALE: 1:15

SHEET 1 OF 2

NEXT ASSEMBLY
5215733
5215737

REVISION				
REV	DESCRIPTION	DATE	EDITED BY	ECO#
A	PRODUCTION RELEASE, DERIVED FROM 5601174	09/13/2021	TM	01307

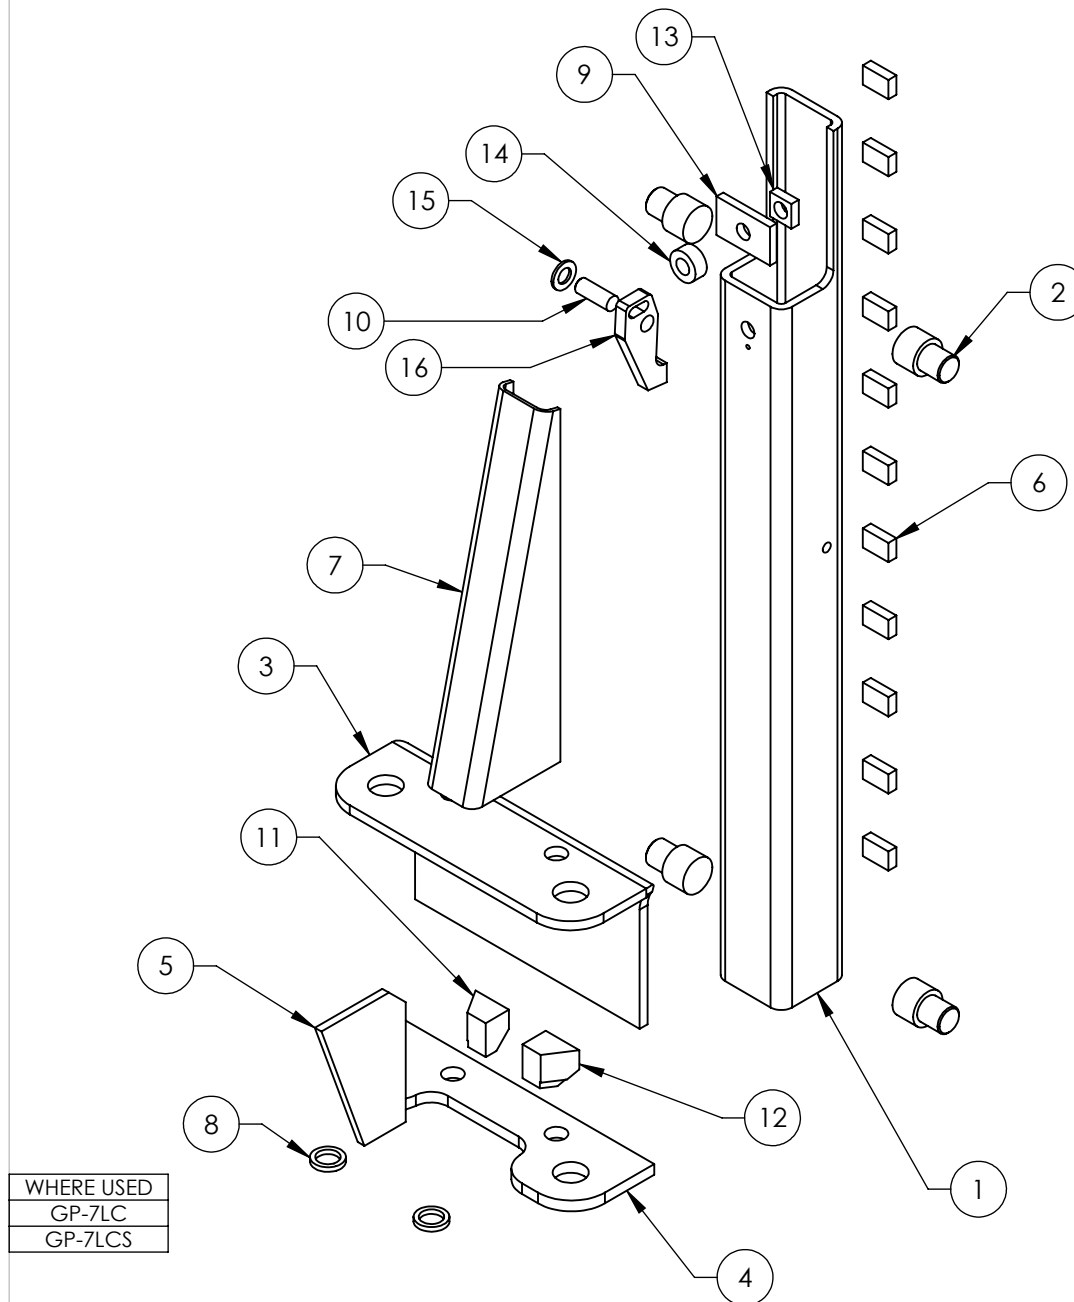

ISOMETRIC VIEW
FOR REFERENCE ONLY
DO NOT SCALE



ITEM NO	PART NUMBER	DESCRIPTION	QTY	REV
1	5766412	GP-7LC LIFT HEAD TUBE	1	A
2	5746279	GP-7 SERIES SLIDE BLOCK PIN	4	A
3	5701436	GP-7 LIFT HEAD TOP ARM PLATE	1	G
4	5736471	GP-7 SERIES LIFT HEAD BOTTOM ARM PLATE	1	C
5	5737006	GP-7 LIFT HEAD PLATE SPACER	1	A
6	5735417	SAFETY STOP, SMALL	11	A
7	5700303	GP-7 SERIES LIFT HEAD GUSSET	1	A
8	5545173	WASHER Ø27 x Ø38	2	-
9	5736499	GP-7 CABLE BREAK CLEVIS PLATE	1	C
10	5746282	GP-7 CABLE BREAK SAFETY LIFT HEAD CLEVIS PIN	1	D
11	5736543	2 POST LIGHT DUTY ARM GEAR RESTRAINT STOP LH	1	A
12	5736545	2 POST LIGHT DUTY ARM GEAR RESTRAINT STOP RH	1	A
13	5735637	GP-7 CARRIAGE SAFETY PIN BLOCK	1	A
14	5736529	GP-7 CABLE BREAK WELDMENT SPACER	1	D
15	5545342	WASHER M18 FLAT	1	-
16	5737288	GP-7 CABLE BREAK SAFETY	1	A

WHERE USED
GP-7LC
GP-7LCS

NOTE: UNLESS OTHERWISE SPECIFIED.

- REFER TO MODEL FOR ADDITIONAL INFORMATION
- BREAK AND DEBURR ALL SHARP EDGES 0.3mm
- REMOVE ALL WELD SPLATTER
- DIMENSIONS SHOWN ARE AFTER PAINTING
- PAINT BENDPAK GRAY (RAL-7024) 20% GLOSS

NEXT ASSEMBLY
5216072
5216074

DO NOT SCALE DRAWING

DIMENSIONS ARE IN MM
TOLERANCES:
0. = ±1.5
0.0 = ±0.5

SURFACE FINISH 1.6 ISO Ra µm
FOR MACHINED SURFACES
UNLESS OTHERWISE SPECIFIED

NAME	DATE
DRAWN TM	09/13/2021
CHECKED OR	09/16/2021

THIRD ANGLE PROJECTION




PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS
THE SOLE PROPERTY OF BENDPAK INC. ANY
REPRODUCTION IN PART OR AS A WHOLE WITHOUT
THE WRITTEN PERMISSION OF BENDPAK INC. IS
PROHIBITED.




1645 LEMONWOOD DR.
SANTA PAULA, CA 93060

TITLE:	GP-7LC LIFT HEAD WELDMENT
SIZE	DWG. NO. A 5601725
REV	A
SCALE:	1:8
SHEET	1 OF 3

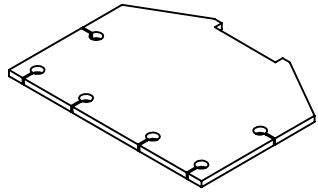

ISOMETRIC VIEW
FOR REFERENCE ONLY
DO NOT SCALE

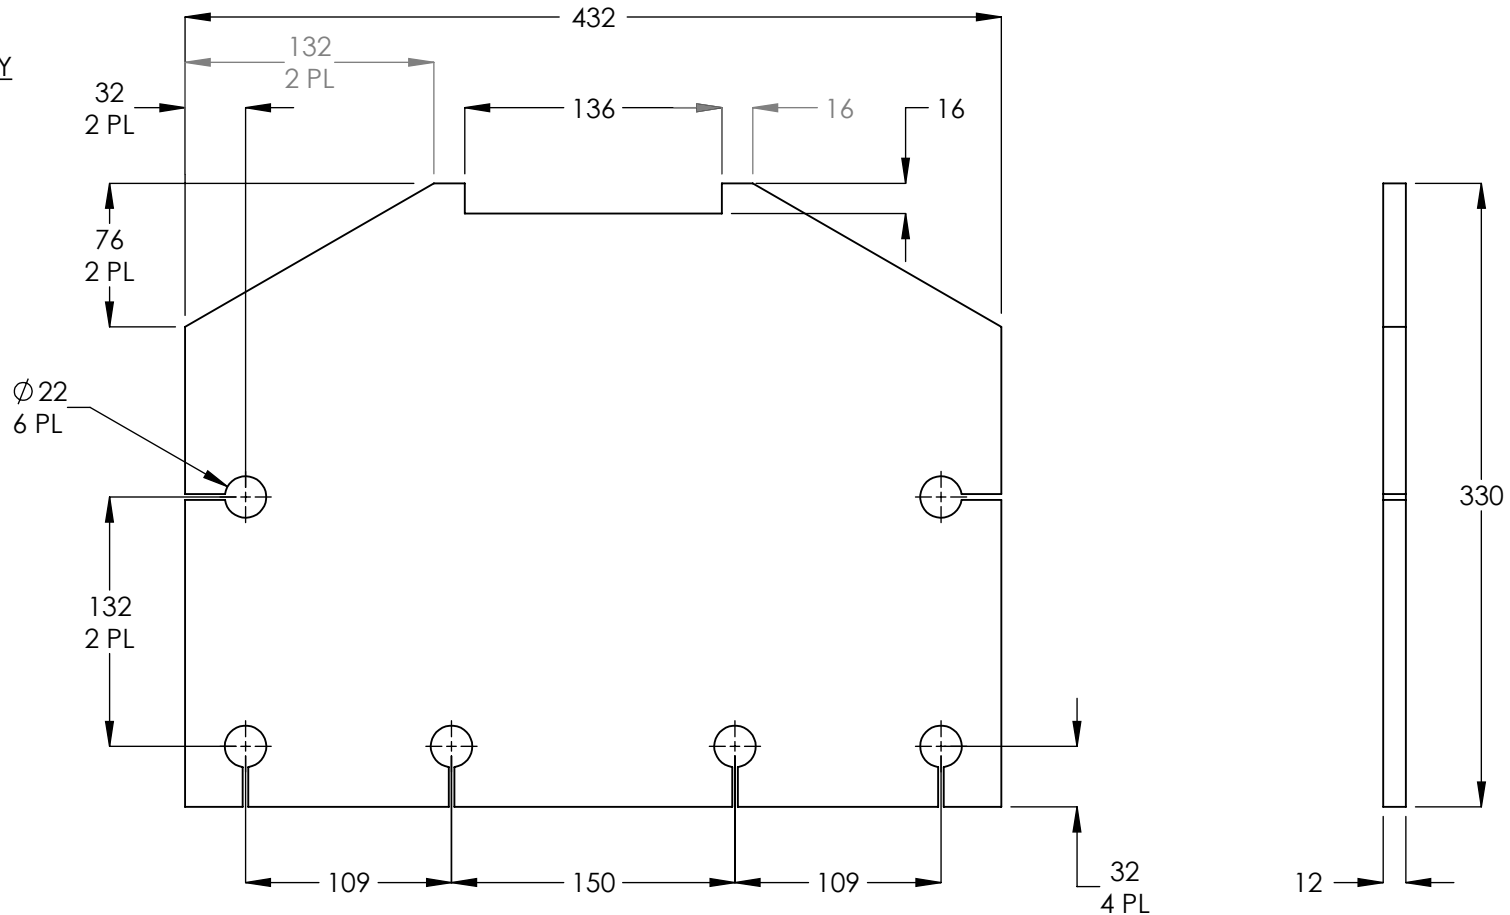

REVISION				
REV	DESCRIPTION	DATE	EDITED BY	ECO#
A	PRODUCTION RELEASE, DERIVED FROM 5730040	06/01/2012	TM	00531
B	ADDED RECTANGULAR CUT	10/23/2012	TM	00555
B-001	UPDATED NEXT ASSEMBLIES	05/24/2017	TS	00833

NOTE: UNLESS OTHERWISE SPECIFIED.

1. CONCENTRICITY TO BE 0.25mm T.I.R. ON ALL DIAMETERS.
2. BREAK AND DEBURR ALL SHARP EDGES 0.3mm
3. **MATERIAL:** ASTM A36 HR OR Q235 GB/T 700

NEXT ASSEMBLY
5600686
5601175
5601177

DO NOT SCALE DRAWING		NAME		DATE		 BendPak.	
DIMENSIONS ARE IN MM TOLERANCES: MACHINE TO 0 = ±1.5 0.0 = ±0.5 0.00 = ±0.13 ANGULAR: MACHINE TO 0 = ±1/2° SURFACE FINISH 1.6 Ra µm FOR MACHINED SURFACES UNLESS OTHERWISE SPECIFIED		DRAWN		TM		1645 LEMONWOOD DR. SANTA PAULA, CA 93060	
		CHECKED				TITLE:	
		THIRD ANGLE PROJECTION				GP-7 POST BASE PLATE	
							
		PROPRIETARY AND CONFIDENTIAL THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF BENDPAK INC. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF BENDPAK INC. IS PROHIBITED.				SIZE DWG. NO.	
						A 5730062	
						SCALE: 1:4	
						REV B	
						SHEET 1 OF 1	

PART SPECIFICATION FORM (STANDARD)

BENDPAK Number:	5900209
MRP Description:	GP-7 SERIES INSTALLATION MANUAL
Date:	02/26/2021
ECO :	---

1. Engineering Specification

Application:

INSTALLATION MANUAL

Detailed Description:

Print Settings for BendPak Manuals:

Unless otherwise specified, use these settings for printing BendPak manuals:

- **Color:** Black and white.
- **Size:** A4 (210 to 297 mm), 8.5 by 11 inches (216 to 279 mm), or between
- **Binding:** Saddle stitched
- **Paper:** 100 to 120 gsm (27 to 32 pound), uncoated



1645 Lemonwood Dr.
Santa Paula, CA 93060 USA
Toll Free: (800) 253-2263
Telephone: (805) 933-9970
bendpak.com

GrandPrix Two-Post Lifts Installation and Operation Manual

Manual P/N 5900209 — Manual Revision E1 — February 2021

Models:

- GP-7
- GP-7LC
- GP-7LCS



Model GP-7 shown

Designed and engineered by BendPak Inc. in Southern California, USA. Made in China.



Read the entire contents of this manual **before** using this product. Failure to follow the instructions and safety precautions can result in serious injury or death. Make sure all other operators also read this manual. Keep the manual near the product for future reference. **By proceeding with installation and operation, you agree that you fully understand the contents of this manual and assume full responsibility for product use.**

2. Vendor Information (Or for Reference)

Approved Vendor	Vendor Part #	Contact #	Preferred Vendor
1)			
OR BENDPAK ENGINEERING APPROVED EQUIVALENT			

GP-7S Series Product Decal Positioning



Grandprix_Logo-By_BendPak_Decal.pdf

Material: Clear Adhesive PET

Size: 32"W x 5.5"H

Thickness: 4 Mil

Finish: Matte Overlaminate (No Gloss)

Ink: U.V. protected, Opaque White

Print Process: Silk Screen, 85 line-screen (Yellow color in file represents what should be clear PET material and SHOULD NOT print as Yellow ink. White area in file represents Opaque White ink.)

Lamination: Clear Laminate non-glare medium matte over laminate for abrasion, chemical, and ultra violet protection.

P/N 5906007

2 Total

Grandprix_Vertical_Branding_Decal.pdf

Material: Clear Adhesive PET

Size: 4"W x 33.5"H

Thickness: 4 Mil

Finish: Matte Overlaminate (No Gloss)

Ink: U.V. protected, Opaque White


Print Process: Silk Screen, 85 line-screen (Yellow color in file represents what should be clear PET material and SHOULD NOT print as Yellow ink. White area in file represents Opaque White ink.)

Lamination: Clear Laminate non-glare medium matte over laminate for abrasion, chemical, and ultra violet protection.

P/N 5906006

4 Total

CLEAR ADHESIVE PET - DOES NOT PRINT YELLOW

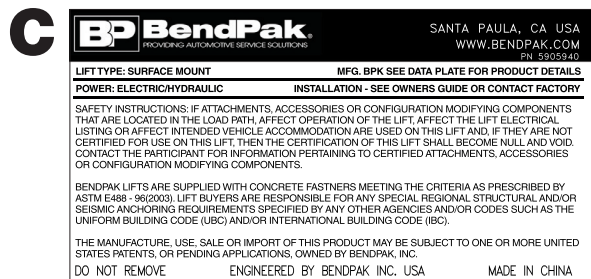

P/N 5905940

Product_Data_Label_5905940-New.pdf:

Size: 4.5"W x 2.3"H

Material: White Vinyl Pressure Sensitive Adhesive

Thickness: 4 Mil

Ink: U.V. protected CMYK 2/C Process

Finish: Matte Overlaminate (No Gloss)

Print Process: Offset Lithography - 200 line-screen or 300 p.p.i. for digital

Lamination: Clear Laminate non-glare medium matte over laminate for abrasion, chemical, and ultra violet protection.



Max. Cap. Attention.pdf:

Size: 4.5"W x 3.25"H

Material: White Vinyl Pressure Sensitive Adhesive

Thickness: 4 Mil

Ink: U.V. protected CMYK 2/C Process

Finish: Matte Overlaminate (No Gloss)

Print Process: Offset Lithography - 200 line-screen or 300 p.p.i. for digital

Lamination: Clear Laminate non-glare medium matte over laminate for abrasion, chemical, and ultra violet protection.

P/N 5905645

GP-7 Series Product Decal Positioning

E

IMPORTANT

OPERATION / MAINTENANCE
INSTRUCTIONS - PLEASE READ
INSTRUCTIONS D'UTILISATION /
ENTRETIEN - VÉRIFIEZ LIRE

DANGER



Long-wheelbase vehicles can damage lift and/or cause personal harm or injury to operators if loaded incorrectly. All vehicles MUST be positioned on lift with CENTER OF GRAVITY midway between axles. Les véhicules à empattement long peuvent endommager le pont élévateur et/ou causer des blessures ou des blessures aux opérateurs s'ils ne sont pas chargés correctement. Tous les véhicules DOIVENT être positionnés sur l'ascenseur avec le CENTRE DE GRAVITÉ à mi-chemin entre les adaptateurs.

CAUTION



Never lift any vehicle in any manner with FEMER from 4th arm or higher. Rated capacity of each lift arm is no greater than 1/4 of the overall lifting capacity. Ne soulevez jamais d'un véhicule de l'arrière d'un véhicule existant que ce soit avec MOINS de 25 % de la capacité de levage globale. Capacité nominale de charge bras de levage ne dépasse pas 1/4 de la capacité de levage globale.

WARNING

WIRE ROPE INSPECTION AND MAINTENANCE

- Lifting cables should be replaced every (3) three years or when visible signs of damage are apparent. DO NOT USE LIFT WITH DEFECTIVE OR WORN CABLES.
- Wire rope should be maintained in a well-lubricated condition at all times. Wire rope is only fully protected when each wire strand is lubricated both internally and externally. Excessive wear will shorten the life of the wire rope. The factory suggests wire rope lubricant that penetrates to the core of the rope and provides long-term lubrication between each individual strand. In order to make sure that the inner bays of the rope remain well-lubricated, lubrication should be carried out at intervals not exceeding three (3) months during operation.
- All sheaves and guide rollers in contact with the moving wire rope should be given regular visual checks for surface wear and lubricated to make sure that they run freely. This operation should be carried out at appropriate intervals generally not exceeding three (3) months during operation. For all sheave sets, the factory recommends standard wheel bearing grease. For all sheaves and/or guide rollers, the factory recommends 90-WT gear oil or similar heavy lubricant applied by any method, including pump/spray dispensing, brush, hand and/or swabbing.

ATTENTION

INSPECTION ET ENTRETIEN DES CÂBLES MÉTALLIQUES

- Les câbles ou levage doivent être remplacés tous les (3) trois ans ou lorsque des signes visibles de dommages sont apparents. N'UTILISEZ PAS LE LIFT AVEC DES CÂBLES DÉFECTUEUX OU PORTÉS.
- Le câble métallique doit être entretenu en bon état de lubrification en tout temps. Le câble métallique n'est entièrement protégé que lorsque chaque brin de fil est lubrifié à l'intérieur et à l'extérieur. Une usure excessive raccourcit la durée de vie du câble métallique. L'usine suggère un lubrifiant pour câble métallique qui pénètre jusqu'à la corde du câble et assure une lubrification à long terme entre chaque brin individuel. Afin de s'assurer que les couches internes du câble restent bien lubrifiées, la lubrification doit être effectuée à des intervalles ne dépassant pas trois (3) mois pendant l'opération.
- Toutes les poulies et les rouleaux de guidage en contact avec le câble métallique en mouvement doivent être soumis à des contrôles visuels réguliers de l'usure de la surface et lubrifiés pour s'assurer qu'ils fonctionnent librement. Cette opération doit être effectuée à des intervalles appropriés ne dépassant généralement pas trois (3) mois pendant l'opération. Pour tous les ensembles de poulies, l'usine recommande une graisse standard pour roulements de roue. Pour toutes les poulies et/ou rouleaux de guidage, l'usine recommande une huile pour engrenage 90-WT ou un lubrifiant lourd similaire appliqué par n'importe quelle méthode, y compris la distribution par pompe / pulvérisation, une brosse, une main et/ou un essouffement.

LIFT OPERATION

TO RAISE LIFT

- Read Operating and Safety manuals before using lift.
- Always check overhead safety shutoff switch for proper function before operating lift. Lift should become inoperative when overhead stop bar is pushed upward.
- Always lift vehicle according to manufacturer's recommended lifting points.
- Position vehicle between columns. Adjust swing arms so that vehicle is positioned with the center of gravity midway between pads.
- Position lift contact pads at manufacturer's recommended lifting points.
- Use truck adapters as needed. Never exceed 10" of pad/adaptor height.
- Raise lift by pressing RAISE BUTTON on power unit until contact pads make contact with the underside of the vehicle.
- Stretch to make sure vehicle is secure.
- Raise vehicle to desired working height, then press power unit LOWERING HANDLE until lift cam/lugs rest onto nearest safety lock position.
- Maintain visual contact with vehicle and surrounding area at all times while raising lift.
- STOP IMMEDIATELY if load shifts or becomes unlevel.
- Always ensure safety locks are engaged before any attempt is made to work on or near vehicle.
- Always ensure lift contact pads are making full contact with vehicle before any attempt is made to work on or near vehicle.

TO LOWER LIFT

- Raise lift by pressing RAISE BUTTON on power unit. Divide lift at least five inches to allow adequate clearance for the locks to clear.
- Clear safety locks by maintaining pressure on SAFETY LOCK RELEASE HANDLE to its furthest travel.
- Be sure tool trays, stands or personnel are removed from under vehicle.
- Lower vehicle by pressing power unit lowering handle until lift has descended completely.
- Maintain visual contact with vehicle and surrounding area at all times while lowering lift.
- STOP IMMEDIATELY if load shifts or becomes unlevel.
- Before removing vehicle from lift area, position lift arms to provide unobstructed exit.
- NEVER drive over lift arms.

REQUIRED MONTHLY MAINTENANCE

- ALWAYS consult operator manual for factory recommended maintenance.
- Check overhead safety cut-off switch for proper function.
- Check arm restraints for proper operation.
- Check all character connections, bolts and pins to ensure proper mounting.
- Visually inspect safety locks for proper operation.
- Visually inspect concrete floor. DO NOT USE LIFT if concrete foundation shows signs of deterioration.
- Inspect all anchor bolts and re-tighten if necessary.
- Check columns for square, plumb positioning.
- Inspect all pivot pins, making sure they are properly secured.
- Check for loose lifting. Safety locks on each column should engage in close proximity to each other as lift rises. Adjust cables if necessary.
- Inspect all lift pads, replace if necessary.

WARNING!

1. WARNING: If cement anchor bolts are loose or any component of the lift is found to be defective, DO NOT USE LIFT!

2. Never operate the lift with any person or equipment below.

3. Never exceed rated capacity.

4. Always ensure safety locks are engaged before any attempt is made to work on or near vehicle.

5. Never leave lift at elevated position unless the safety locks are engaged.

6. Do not let electric motor run until after the damage caused by dampness is not covered under warranty.

ATTENTION!

1. AVERTISSEMENT: si les boulons d'ancrage en ciment sont desserrés ou si l'un des composants de l'élevateur s'avère défectueux, N'UTILISEZ PAS LE LIFT!

2. N'utilisez jamais l'ascenseur avec une personne ou un équipement en dessous.

3. Ne dépassez jamais la capacité nominale.

4. Assurez-vous toujours que les loquets de sécurité sont engagés avant d'essayer de travailler sur ou à proximité du véhicule.

5. Ne laissez jamais l'ascenseur en position élevée à moins que les loquets de sécurité ne soient engagés.

6. Ne laissez pas le moteur électrique se refroidir! Les dommages au moteur causés par l'humidité ne sont pas couverts par la garantie.

Grandprix_2-Post_Safety_Label-FRE-ENG-5906014.pdf:

Size: 4"W x 38"H

Material: White Vinyl Pressure Sensitive Adhesive

Thickness: 4 Mil

Ink: U.V. protected CMYK 2/C Process

Finish: Matte Overlamine (No Gloss)

Print Process: Offset Lithography - 200 line-screen or 300 p.p.i. for digital

Lamination: Clear Laminate non-glare medium matte over laminate for abrasion, chemical, and ultra violet protection.

P/N 5906014

F

WARNING

USE PROPER ADAPTERS

Do not attempt to lift trucks or other heavy type vehicles with incorrect roller contact pads. ALWAYS use lift with correct pads when using or damaged. Contact dealer or your distributor for product information.

ATTENTION

UTILISEZ DES ADAPTATEURS APPROPRIÉS

N'essayez pas de soulever des camions ou d'autres véhicules de type lourd avec des patins de contact incorrects. Utilisez toujours l'adaptateur approprié avec les véhicules lourds. Contactez votre revendeur ou votre distributeur pour obtenir des informations sur le produit.

FRAME CRADLE ADAPTERS
ADAPTATEURS DE CARRÉE DE CADRE
DCLM 5025008

Required for use when lifting trucks, vans or other frame vehicles that require additional lifting height. Recommended for trucks, vans and vans that require additional lifting height. Recommended for use on concrete, ASBESTOS and/or asbestos. Do not use on surfaces that require additional lifting height.

STEEL LIFT PADS
L'ADAPTATEUR EN ACIER
DCLM 5025009

Steel lift pads are recommended for additional stability on all vehicles. The longer the pad, the more stable the vehicle will be. Do not use on surfaces that require additional lifting height.

REPLACEMENT POLYURETHANE TOP PADS
REPLACEMENT POLYURETHANE TOP PADS
DCLM 5025011

NEVER use lift with missing or damaged roller contact pads. ALWAYS replace roller contact pads when worn or damaged. Do not attempt to use roller contact pads that are not the correct size or shape. Do not use roller contact pads that are not the correct size or shape.

TO PLACE ORDER

Visit www.bombard.com Monday - Friday 7 a.m. - 4:30 p.m. PST
or call 1-800-933-9970

POUR COMMANDE

Visitez www.bombard.com Lundi - Vendredi 7h du matin - 16h30 PT
ou appelez 1-800-933-9970

Grandprix_2-Post_Adapters_Label_FRE-ENG-5905484.pdf:

Size: 4"W x 13.5"H

Material: White Vinyl Pressure Sensitive Adhesive

Thickness: 4 Mil

Ink: U.V. protected CMYK 2/C Process

Finish: Matte Overlamine (No Gloss)

Print Process: Offset Lithography - 200 line-screen or 300 p.p.i. for digital

Lamination: Clear Laminate non-glare medium matte over laminate for abrasion, chemical, and ultra violet protection.

P/N 5905484

G

TO RAISE LIFT:

- Press and hold **UP** button.
- When lift is just **PAST** desired height, release **UP** button.
- Hold down Lowering Handle.
- DO NOT** hold down Safety Lock Release Handle.
- Release Lowering Handle.

PN 5905414

TO LOWER LIFT:

- Press and hold **UP** button for two to three seconds, moving lift off safety locks.
- Hold down Safety Lock Release Handle **and** Lowering Handle.
- When lift is fully lowered, release both handles.

P/N 5905414

H

DANGER

THE MAXIMUM LIFTING CAPACITY FOR THIS LIFT IS DESCRIBED BELOW

Maximum Lifting Capacity 7,000 lbs. / 3,175 kg
Max. Lifting Cap. / Front of Lift Center 3,500 lbs. / 1,588 kg
Max. Lifting Cap. / Rear of Lift Center 3,500 lbs. / 1,588 kg

Exceeding the weight capacity of this lift can damage lift and/or property and may cause personal harm, injury or death to operators and/or bystanders. All vehicles MUST be positioned on lift with CENTER OF GRAVITY midway between adapters and/or centered on runways. Damage to lift due to overloading or misuse IS NOT covered under warranty.

LA CAPACITÉ DE LEVAGE MAXIMUM POUR CE LEVAGE EST DÉCRIT CI-DESSOUS

Capacité de Levage Maximale 7,000 lbs. / 3,175 kg
Max. Capuchon De Levage, / Avant du centre de relèvement 3,500 lbs. / 1,588 kg
Max. Capuchon De Levage, / Arrière du centre de levage 3,500 lbs. / 1,588 kg

Le dépassement de la capacité de poids de cet élévateur peut endommager l'ascenseur et/ou les biens et peut causer des dommages corporels, des blessures voire la mort aux opérateurs et/ou aux passants. Tous les véhicules DOIVENT être placés sur l'élévateur avec le CENTRE DE GRAVITÉ à mi-chemin entre les adaptateurs et/ou au centre des pistes. Dommages à soulever dus à la surcharge ou une mauvaise utilisation N'EST PAS couverte par la garantie.

Max. Cap. Danger 7K.pdf:

Size: 4"W x 8.25"H

Material: White Vinyl Pressure Sensitive Adhesive

Thickness: 4 Mil

Ink: U.V. protected CMYK 2/C Process

Finish: Matte Overlamine (No Gloss)

Print Process: Offset Lithography - 200 line-screen or 300 p.p.i. for digital

Lamination: Clear Laminate non-glare medium matte over laminate for abrasion, chemical, and ultra violet protection.

P/N 5905401

GP-7 Product Decal Positioning



PN 5905654

ALI Gold Label - MET C-US.png

(Order Labels from ALI)

J

BP BendPak Santa Paula, CA US
www.bendpak.com

MODEL NUMBER

DESCRIPTION

LIFT CAPACITY **DATE CODE**

VOLTAGE **SERIAL NUMBER**

☐ 110-240V, 50-60 Hz, 1 Ph

☐ 208-240V, 50-60 Hz, 1 Ph

☐ 380-415V, 50-60 Hz, 3 Ph

☐ 208-440V, 50-60 Hz, 3 Ph

UPC

DANGER!
Disconnect Power
Before Servicing

P/N 5905951

2017_Serial_Tag-B-5905951.pdf:

Size: 3"W x 3"H

Material: 2 Mil. Gloss polyester thermal transfer label with a high performance permanent acrylic adhesive.


Ink: 1 Color-Black



ALI_Notice_Label.jpg

Size: 3"W x 1.75"H

(Order Labels from ALI)

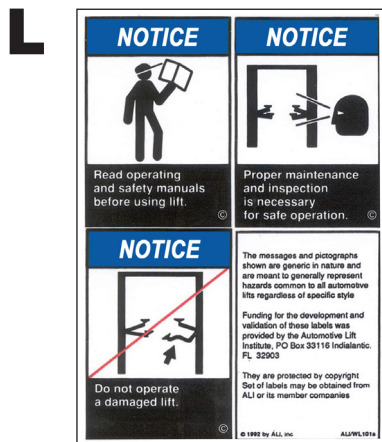


ALI Blue

(Order Labels from ALI)

P/N 5905109

(As a set J, K, L)

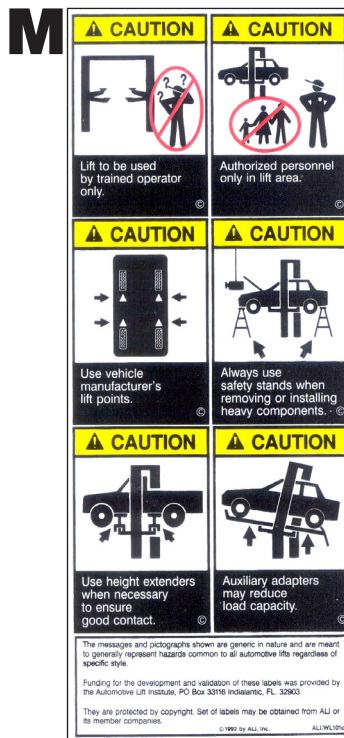

ALI Yellow

(Order Labels from ALI)



ALI Orange

(Order Labels from ALI)

GP-7 Product Decal Positioning

O



NOTE: GRAY DOES NOT PRINT

NOTE: DIE-CUT TO SHAPE

PN 5906044

American_Owned_50_Years_Logo.pdf:

Trim: 3"W x 4"H


Material: 4 Mil. White Adhesive Vinyl

Ink: U.V. protected CMYK 4/C Process

Finish: Matte Overlamine (No Gloss)

Print Process: Offset Lithography - 200 line-screen or 300 p.p.i. for digital

Lamination: Clear Laminate non-glare medium matte over laminate for abrasion, chemical, and ultra violet protection

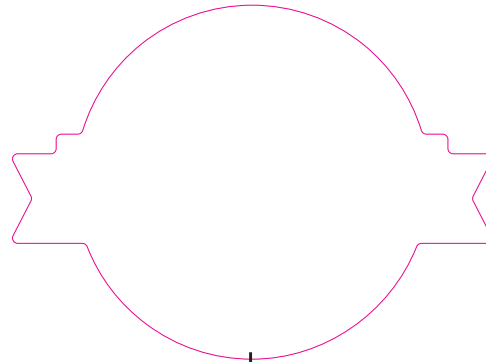


DIE-LINE

PLACE ON FRONT AND BACK

**Powerside Post
(Front View)**



B

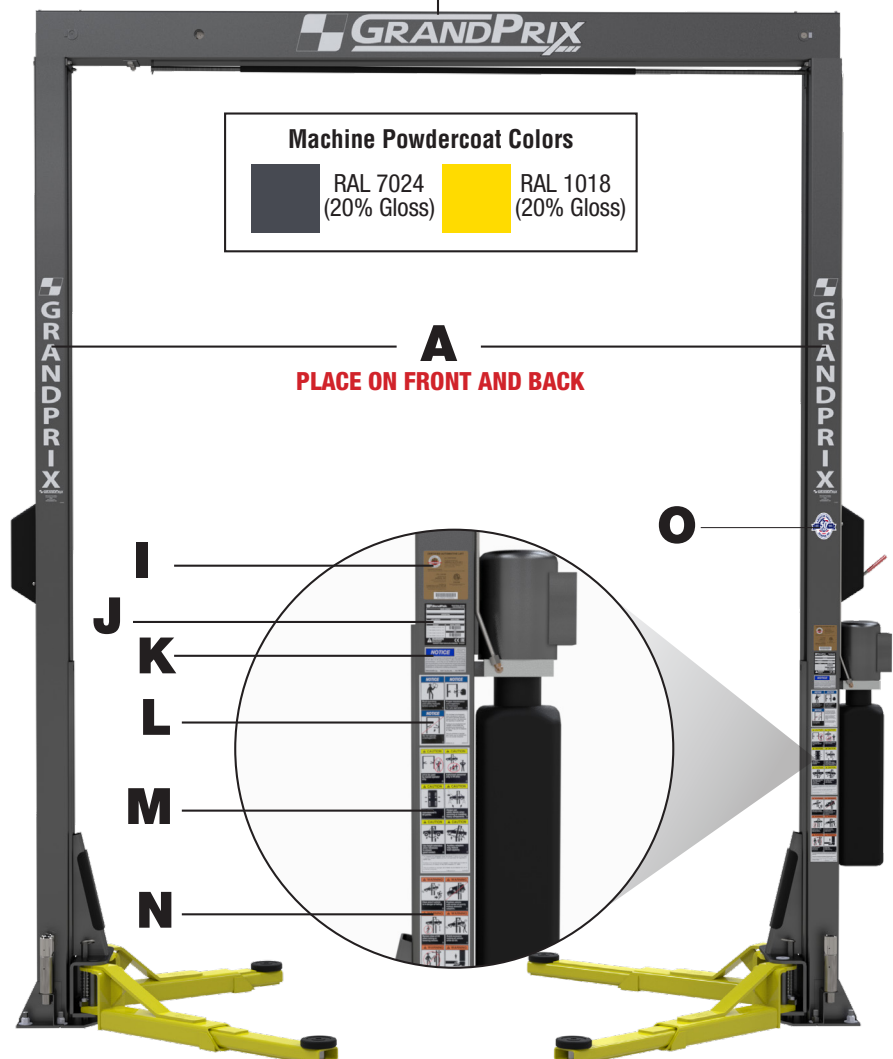

A
PLACE ON FRONT AND BACK

I

J

K

L

M

N

O

GP-7 Product Decal Positioning

**Powerside Post
(Side View)**



**Powerside Post
(Back View)**



**Opposite Post
(Back View)**

