


WSA-100 Utility Station

Quick Start Guide

P/N 5900095 — Rev. A1 — March 2019

The WSA-100 Utility Station conveniently adds air and electric outlets to any BendPak lift.

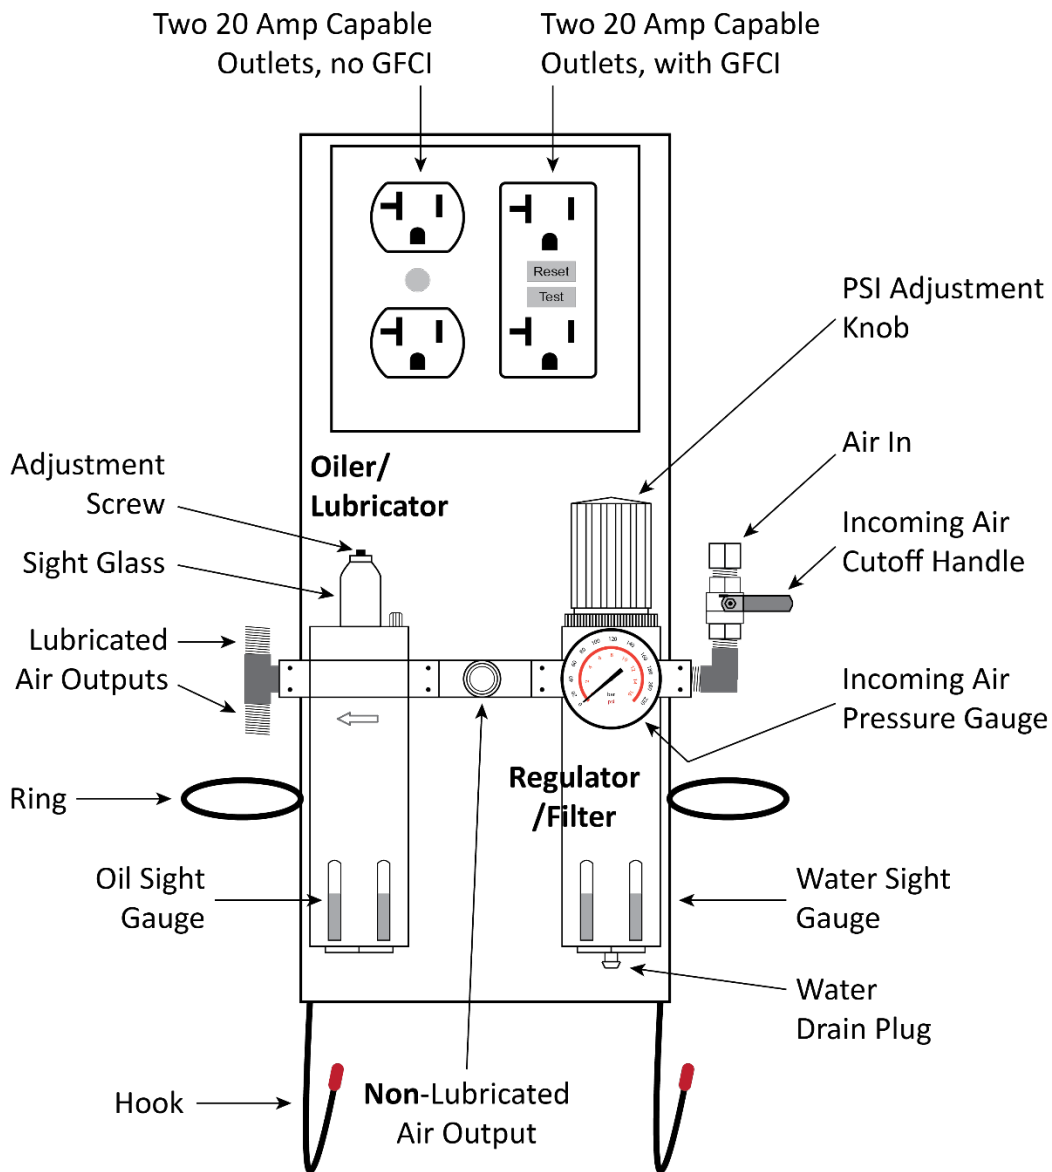

There are two versions of the WSA-100 available:

- 5210436 fits heavy duty HD/HDS-18/27/35/40 four-post lifts.
- 5210438 fits light and medium duty two- and four-post lifts.



1645 Lemonwood Drive
Santa Paula, CA, 93060 USA

The main components of the WSA-100 are:

- **Four 110 VAC outlets.** Two have GFCI, two do not. All four can support 15 or 20 amp plugs. Have certified electrician connect outlets to 1 phase, 60 Hz, 110 VAC using suitable conduit (not supplied) per local codes. Both receptacles must be grounded to the box.
- **Two rings and two hooks.** For holding tools and hoses, for example.
- **Air source.** Brings pressurized air to your lift. There are three parts to the air source:
 - **Incoming air.** Connect an incoming air supply to the Air In connector. You need to supply an appropriate fitting for the Air In connector.
 - **Regulator / Filter.** Removes contaminants from incoming air. Includes a gauge that shows the pressure of the incoming air. If you see water in the Water Sight Gauge, drain it using the Water Drain Plug. Non-lubricated air can be used to put air into tires or for instrument calibration, for example. To adjust air pressure, lift the PSI Adjustment Knob and turn clockwise to increase pressure and counterclockwise to decrease pressure. Push Knob back down to lock in new pressure setting.
 - **Oiler / Lubricator.** Puts pneumatic oil, for lubrication, into the incoming air. Lubricated air provides lubrication to pneumatic tools, which reduces friction and helps them last longer. Only use lubricated air with pneumatic products that require it.

To drain water from the Regulator/Filter reservoir:

1. Check the Water Sight Gauge to see how much water is currently in the reservoir.
If the reservoir is one quarter (25%) or more filled with water, you need to drain it.
2. Disconnect the air source at the Air In connector.
3. Press upwards on the Water Drain Plug at the bottom of the reservoir. The water drains out.
4. Release the Water Drain Plug and re-connect the air source.

To add pneumatic oil to the Oiler/Lubricator:

1. Check the Oil Sight Gauge to see how much pneumatic oil is currently in the reservoir.
If the reservoir is less than one half (50%) filled with pneumatic oil, you need to add oil to it.
2. Disconnect the air source at the Air In connector.
3. Turn the oil reservoir counter-clockwise and pull it off.
4. Add SAE 10W Air Tool Oil or generic pneumatic oil to the reservoir.
5. Put the oil reservoir back in place, turning it clockwise until tight, then re-connect the air source.

To check the oil feed rate on the Oiler/Lubricator:

1. Use a device that uses lubricated air.
2. Watch the Sight Glass to see how much pneumatic oil comes out. Your goal is 1 or 2 drops per use.
3. If you are not getting 1 or 2 drops, turn the Adjustment Screw counter-clockwise (using a small flat-head screwdriver) to increase the rate or clockwise to decrease the rate. Use the device again to check the rate.
4. When you are getting 1 or 2 drops, stop making adjustments.

To install the WSA-100:

- **Two-Post Lifts.** Use the unused mounting bracket on the Powerside Post. Do **not** drill into post.
- **Four-Post Lifts.** Use unused mounting bracket on the Powerside Post. Do **not** drill into post.